

 
Get
Started

All you need to know to get going.

hTC EVO View 4G™



Welcome!

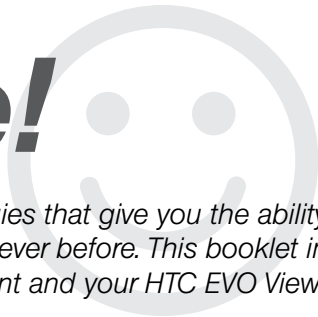

Sprint is committed to developing technologies that give you the ability to get what you want when you want it, faster than ever before. This booklet introduces you to the basics of getting started with Sprint and your HTC EVO View 4G™.

Visit sprint.com/support for the complete User Guide, along with videos, tutorials, and community forums for your device.

Only on the Now Network.

 
Using This Guide

This Get Started guide is designed to help you set up and use your new HTC EVO View 4G. It's divided into four sections to help you find the information you need quickly and easily.

- Get Ready** — page 1 — *Find out what you need to do before you use your device the first time, including activating Sprint service on your device.*
- Android Basics** — page 4 — *Learn some basics about how to move around on your device, use the home screen, and enter text. If you're familiar with Android devices, you can probably skip these pages (although a refresher course never hurt anyone).*

- Use Your Device** — page 12 — *Take advantage of your device's features and Sprint services, from the basics (Messaging) to the more advanced (using Facebook, Qik, and more).*
- Tools & Resources** — page 30 — *Find useful tips for your device and discover resources and other helpful Sprint information. For additional information including the full User Guide, videos, tutorials, and community forums, visit sprint.com/support.*

Your HTC EVO View 4G

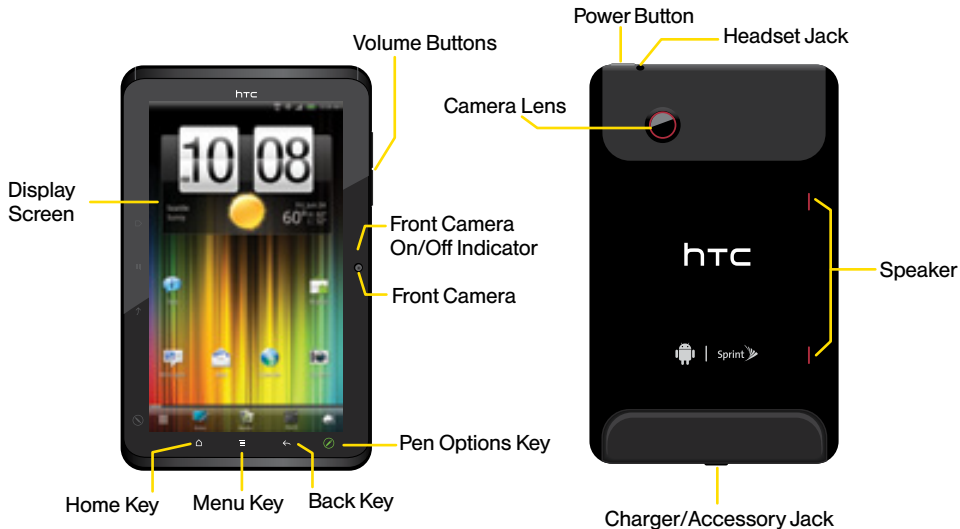


Get Your Device Ready

Charge the Battery

 
1. Insert the USB connector of the AC adapter into the the charger/accessory jack at the bottom of your device.
2. Plug the AC adapter into an electrical outlet.

Turn the Device On

- Press the power button () to turn your device on (silver button located at the top of the device on the right).

Unlock the Screen

- Press and hold the unlock ring and then drag it upward (until the whole ring appears onscreen).

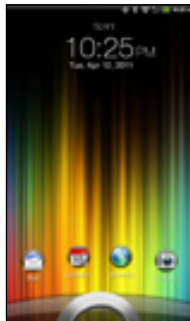



Activate Your Device

Activate Your Device

- If you purchased your device at a Sprint Store, it is probably activated and ready to use.
- If you received your device in the mail, and it is a new Sprint account, your device is designed to activate automatically when you first turn it on. You will see a **Hands Free Activation** screen at startup. When it's finished, tap **OK** to continue. To confirm your activation, launch the Internet browser (see page 20).
- If you received your device in the mail and it is going to be activated on an existing number, go to sprint.com/activate and follow the instructions.

When you have finished, launch the Internet browser (see page 20) to confirm your activation. If your device is still not activated contact Sprint Customer Service at **1-888-211-4727** for assistance.

Turn the Screen On and Off

- To quickly turn the display screen off, press the power button on top of the device ().
- To turn the screen on and display the unlock screen, press  .

Turn the Device Off

1. Press and hold  for about two seconds.
2. On the **Power options** menu, tap **Power off**.

Setup Application



When you turn on your device for the first time, you will get to a setup application that allows you to set up various options and applications, including setting up your Google™ account.*

Complete the Setup Application

- When the device is first turned on, you will see the **Hands Free Activation** screen, which may be followed by a **PRL Update** screen and a **Firmware Update** screen. Tap **OK** after each of these steps.
- When you see the setup application, follow the instructions to complete each step. To skip any section, tap **Skip** or **Next**.
 - Using the onscreen keyboard** – Complete the steps to learn how to use the onscreen keyboard features such as auto-correct and accented and special characters.
 - Transfer my stuff** – Tap **Transfer my stuff** to start moving contacts, SMS messages, and move via Bluetooth from your old phone or device to your new HTC EVO View 4G.
 - Scheduled sync** – Accept the default **Automatically sync data** or select **Manually Sync data** (if you don't have an unlimited data plan with Sprint).
- Use **Google location** – Tap the check boxes to select your Google location options.
- Set up accounts** – Follow the instructions to set up your Google account (Gmail), corporate Microsoft Exchange ActiveSync account, and other mail accounts, and Facebook, Flickr, and Twitter accounts on your device.
- Tap **Finish** when you have finished setup. You will see your home screen.

Launch the Setup Application at Any Time

To return to the setup application at any time after you've already used your device:

- Press  and then tap  > **Setup**.

**You do not need to sign up for a Google account to use your device; however, to download applications from Android Market, you must link your device to a Google account.*

Android Basics: Getting Around Your Device

 
 
Move Around Your Device's Menus and Screens Using Gestures

Your device's touchscreen lets you control everything through various types of touches, or gestures.

Tap: When you want to type using the onscreen keyboard, select items such as application and settings icons, or press onscreen buttons, simply tap them with your finger. A light touch works best.

Press and hold: To open the available options for an item (for example, a link in a Web page), simply press and hold the item.

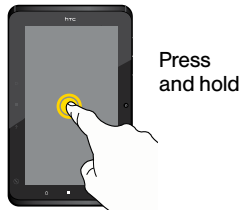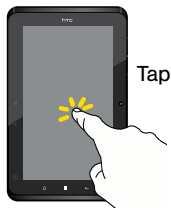

Flick: Move your finger in lighter, quicker strokes than swiping. This finger gesture is always used in a vertical motion, such as when flicking through contacts or a message list.



Swipe or slide: Quickly drag your finger vertically or horizontally across the screen.

Drag: Press and hold your finger with some pressure before you start to move it. Do not release your finger until you have reached the target position.

Pinch: “Pinch” the screen using your thumb and forefinger to zoom out or zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)

Rotate: Automatically change the screen orientation from portrait to landscape by turning the device sideways. (To disable auto-rotation, press  >  > **Settings > Display** and clear the **Auto-rotate screen** check box.)



Swipe, Slide or Drag



Pinch





Rotate

Your Home Screen

Viewing Your Home Screen




Your device's Home screen extends horizontally to seven additional full screens. This gives you room to customize your device and put the things you need front and center, just a swipe away.



- To display the Home screen, press  from any screen.
- To view extended screens, swipe the screen left or right. You can cycle through the screens continuously in either direction.
- To quickly select an extended screen, press  from the Home screen or pinch an extended screen to display thumbnails of all eight screens. Tap a thumbnail to display the screen.



Customize Your Home Screen

Use your device's Personalize menu to customize your Home screen appearance.

1. Press  and tap .
2. Tap **Scene, Skin, or Wallpaper** in the Personalize display section.
 - **Scene** lets you quickly apply a preset screen layout with predetermined widgets and apps.
 - **Skin** lets you change the appearance of the icons and other elements that appear on above layer above the wallpaper.
 - **Wallpaper** lets you select a Home screen background from a library or your gallery.
3. Select your options, and tap **Preview** to see your changes, or tap **Apply** to make the changes and return to the Home screen. (Tap the  key as needed to return to the Home screen.)

Note: You can customize and save your own scenes by adding or rearranging Home screen items and tapping  >  > **New**. Enter a scene name and tap **Done** to finish saving.

Add Items to Your Home or Extended Screen

1. Press  and tap .
2. On the Personalize screen in the Add Items to Home section, tap the item you wish to add (such as **Widget** or **Shortcut**).

For example, to add a Facebook widget:

 
1. From the Personalize screen, tap **Widget** > **Facebook**.
2. If the widget is too large for the free space on the screen, slide to a screen with sufficient space, and tap a free space on the screen.

From your new Facebook widget, you can access your Profile, Friends, Photos, and many other of your favorite Facebook features.

Your Home Screen

Status Bar


The status bar at the top of the Home screen lets you quickly see both your device status (connections, signal strength, battery, GPS) and any current notifications.

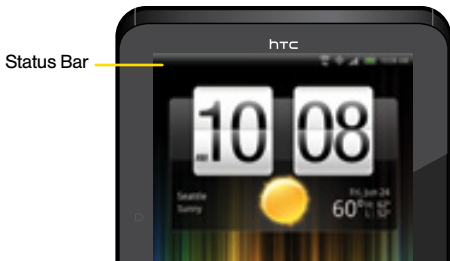


Notifications Panel

When you see a notification icon on the left side of the status bar, drag down on the status bar and make sure the Notifications tab is selected. Tap a notification to open the related application, such as alerts, messages, or events.

 Tip: To quickly access many of your device's settings, select the Quick settings tab instead after dragging down on the status bar.

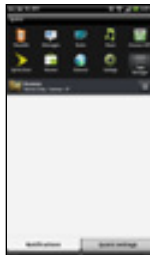


To close the panel, drag the bottom bar up or press .

Buttons and Keys

EVO Buttons and Keys

 The bottom front of your device contains a row of four static keys that let you perform specific functions. Above the buttons, there is a program-dependent row of keys (they're always available from the unlocked Home screen).

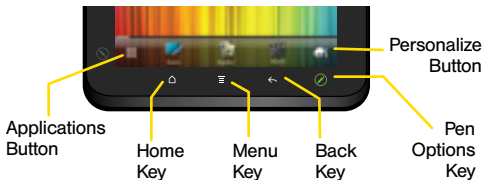

- **Home Key** (🏠) – Press to return to the main Home screen.
- **Menu Key** (☰) – Press to open context-specific menus.

- **Back Key** (⬅️) – Press to return to the previous screen view.
- **Pen Options Key** (🖋️) – Press to open a menu that allows you to set options for the optional tablet pen. (See page 11.)
- **Applications Button** (📱) – Tap to display the applications list.
- **Personalize Button** (👤) – Tap to add shortcuts, widgets, or folders to the current Home screen.

Open Applications

- If an application is on your Home screen or an extended screen, just tap it to open it.
- If an application is not available from your Home screen or an extended screen, tap 📱 to display the applications list, and then tap the application from the alphabetical list. You may have to scroll down to find the application you're looking for.



Entering Text With the Onscreen Keyboards




 

The Touch Input Keyboard

When you select a field that requires text or numbers, the Touch Input keyboard appears so you can enter the information, type your message, update your Facebook status, or send out a Tweet. (If you don't see the keyboard when, for instance, you're entering contact information, just touch the field you're working on to bring it up.) The Touch Input keyboard can be used in either portrait or landscape mode.

Text Entry

Entering text with the Touch Input keyboard is easy: just tap the letters to type the words. Here are a few tips to help you:

- To enter the alternate (gray) character on a key (such as numbers or punctuation), press and hold the key.
- Tap  to enter all numbers or symbols.
- Tap  (shift) to enter uppercase letters. (Tap twice for caps lock.)

- Tap  (enter) to create a new line or paragraph.
- Tap  (backspace) to delete the previous character.
- Tap  (space) to enter a space. When using predictive text, tapping  accepts the suggested word and adds a space.
- Tap  to hide the keyboard.

Using Trace to Enter Text

Instead of tapping the keys on the Touch Input keyboard, you can “trace” through a word's letters to enter that word. For example, if you want to type “the,” tap the “t” key, and without lifting your finger, slide to the “h” key and then the “e” key. When you lift your finger, you'll see “the” in the text entry window.

***Note:** Sometimes if multiple words are possible or if your keystrokes are off-center, a choice list will appear. Simply tap the correct word in the list, or tap **X** to cancel.*

Using Swype to Enter Text


Similar to trace, Swype® lets you slide your finger to enter words.

Switching Keyboards

1. Tap and hold any text entry area.
2. Tap **Input method**, and then tap the keyboard type you wish to use (**Swype** or **Touch Input**).



Changing Touch Input Keyboard Settings

You can customize your onscreen keyboard settings to suit your needs:

- Press  > **Settings** > **Language & keyboard** > **Touch Input** to access your options.
 - **International keyboard** lets you select a language for the keyboard.
 - **Bilingual prediction** shows word predictions for a second language (other than the default language you have chosen).
 - **Text input** provides options for prediction, spell correction, sound and vibration, and calibration.

- **Tutorial** runs you through the basics of using the keyboard.
- **Trace keyboard** lets you change the setting for the trace line that appears when you slide on the keyboard.
- **Personal dictionary** lets you add, edit, and delete words in your custom dictionary.

Changing Swype Settings

- Press  > , and then tap **Settings** > **Language & Keyboard** > **Swype**.

The Optional Tablet Pen

In addition to using your onscreen keyboard for input, you can purchase an optional tablet pen at sprint.com/accessories.

With pen-integrated apps such as Notes, you can use the pen as a pencil, ballpoint pen, brush, etc., and you can also highlight text and erase text and lines you've entered using the pen.

People

Your device's People function lets you access and manage contacts from a variety of sources, including Gmail, Exchange, Facebook, Twitter, Flickr, contacts synced from your computer, and contacts you've entered manually.



Viewing People (Contacts)

- To view People, press  and then tap  > **People**. The menu bar at the bottom of the screen lets you select which category you want to view.






- **Address Book** to view all your contacts.
- **Groups** to view and manage groups (useful for texting and emailing multiple contacts).

Retrieve a Phone Number

1. Press , tap  > **People**, and then tap the Search people text box.
2. Enter the first letter or letters of an entry.
3. Tap the contact to display the contact's phone number(s).

Add a New Entry to People




1. Press  and then tap  > **People**.
2. On the Address Book tab, tap  at the top right side of the screen.
3. Tap the Name box, enter the first and last name of the contact, choose the order in which to display the names, and tap **OK**.
4. Enter the contact information in the boxes provided, and then scroll to the bottom of the screen and tap **Save**.



Linking People With Social Networking Profiles






Since many of your contacts may have profiles or accounts on Facebook, Twitter, or Flickr, your device lets you link your contacts entries with their social networking profiles.

Note: Before using this feature, you must have your social networking accounts set up on the device. See "Facebook, Flickr, and Twitter" on page 23.


1. Press  and then tap  > **People**.
2. Tap a contact and tap  in the upper right corner.
 - If your device has found a link on its own, click **Link** in the upper right corner to see the suggestion.
3. Select an account type (such as Facebook), select an account, and tap **Done**. The contact's Facebook picture and updates will appear in the contact listing in People.

Messaging

Send a Text Message

1. Press  and tap  > Messages.
2. On the All messages screen, tap  or tap  > Compose.
3. Enter a phone number or email address in the To text box, or tap  to search for and select a contact.
4. Type your message in the Add text panel.
5. When you are finished, tap **Send**.



Send a Picture or Video Message (Multimedia Messaging)

1. Follow steps 1 – 4 for sending a text message.
2. Tap .
3. Tap a media type (such as **Picture** or **Video**) and then tap an available album.
4. Tap a picture or clip to select it and tap **Done**.

5. Add additional pictures or clips, if desired, and tap **Done**.
6. If you are satisfied with your message, tap **Send**.

Note: For information on taking pictures and videos with your device, see “Camera & Camcorder” on page 18.

Access Messages

1. Press  and tap  > Messages.
2. From the All messages screen, tap the message you want to view.




All your text and MMS messages for a contact are collected in an ongoing “conversation,” so when you view a message, you can scroll through the entire history of your messages with that person.

Sprint 4G

Take Advantage of 4G Speed

Sprint 4G data services give you the speed you need to watch and upload high-res streaming videos, browse the Web, and have real-time video chats with your friends.

For information about the availability of Sprint 4G in your location, visit sprint.com/coverage.




1. To activate Sprint 4G, press  >  > and tap **Settings** > **Wireless & networks**.
2. Tap the **4G** check box to turn Sprint 4G on.
 - When you're connected to the 4G network, you'll see the 4G icon  in the status bar.

***Note:** When you're not in a Sprint 4G services area, clear the 4G check box in the Wireless & networks settings page to extend battery life.*

Wi-Fi

Connect to a Wi-Fi Network



When you're in range of an available Wi-Fi network you can use your device's Wi-Fi feature to access the Internet and other data services.

1. Press  >  > and tap **Settings** > **Wireless & networks**.
2. Tap the **Wi-Fi** check box to turn Wi-Fi on.
3. Tap **Wi-Fi settings** to display a list of available networks.
4. Tap a Wi-Fi network to connect. If necessary, enter the security key and tap **Connect**.
 - When you're connected to a Wi-Fi network, you'll see the Wi-Fi icon  in the status bar.

***Note:** When you're not using Wi-Fi, clear the Wi-Fi check box in the Wireless & networks settings page to extend battery life.*

You can link as many as 10 email accounts to your HTC EVO View 4G, including one Exchange ActiveSync account. You can set up email accounts through the setup application or directly through the email application. (**Note:** If you have added a Google account during the initial setup process, your Gmail account will already be enabled.)



Set Up a Gmail Account

1. Press  and tap  > Gmail.
2. Tap **Add account** > Google.
3. Follow the instructions to set up or sign in to a Gmail account.
4. Once you have entered all the information, tap **Finish setup**.



***Note:** Although you need a Gmail account to use certain features such as Android Market, you do not have to use Gmail as the default account for your device.*

When setting up a new Google account, you will be prompted to add a secondary email address. Enter a second Gmail address or any other email address from which you currently send and receive email. This address is used to authenticate your account should you ever encounter problems or forget your password. It is strongly encouraged for Android users so you can regain access to Google services and purchases on your device.





Set Up a POP3/IMAP Email Account

1. Press  and tap  > Mail.
2. On the **Choose a mail provider** screen, tap **Other (POP3/IMAP)**.
3. Enter the Email address and Password for the email account and then tap **Next**.
4. Enter an Account name and Your name and tap **Finish setup**.









Set Up a Microsoft Exchange ActiveSync Account

 
1. Press  and tap  > Mail.
2. On the Choose a mail provider screen, tap **Microsoft Exchange ActiveSync**.
3. Enter the Exchange ActiveSync account details and then tap **Next**.
 - Contact your Exchange Server administrator for required sign-in information.
4. Select the type of information you want to synchronize and tap **Finish setup**.

Access Email Messages

1. Press  and tap  > Mail or  > Gmail.
 - If necessary, tap the selection arrow () and tap the email account you want to use.
2. From the inbox, tap the message you want to view.




Send an Email Message

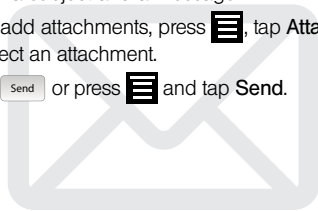1. Press  and tap  > Mail or  > Gmail.
2. If necessary, tap the selection arrow () and tap the email account you want to use.
3. Press  and tap **Compose**.
4. Enter an email address or contact name in the To text box.
5. Enter a subject and a message.
 - To add attachments, press , tap **Attach**, and select an attachment.
6. Tap  or press  and tap **Send**.







Camera & Camcorder


Take a Picture

1. Press  and then tap  > **Camera**.
2. Frame your subject in the screen. The camera will automatically focus on the center portion of the screen. (If you want to focus on a different area, simply tap that part of the screen.) You can take pictures in either portrait or landscape (widescreen) mode.
 - Use the alternate front-facing camera for self-portraits and video chat. To access the front camera, from the camera or camcorder screen, tap the menu tab and then tap **Switch camera**.
3. Tap  to take a picture.
4. Tap an icon on the Review screen to save, view, send, or delete your picture.

Record a Video




1. Press  and then tap  > **Camcorder**.
2. Rotate the device counter-clockwise (videos are captured in widescreen mode) and frame your subject in the screen.
3. Tap  to begin capturing video. Tap  to stop recording.
4. Tap an icon on the Review screen to save, view, send, or delete your video.

Camera & Camcorder Settings





- From the camera or camcorder screen, tap  to open the settings menu. Available settings include:
 - **Self-timer, Image adjustment, White balance, Resolution, ISO, Review duration, Widescreen, etc.**

 
View Pictures and Videos

The Gallery application lets you review all the pictures and videos on your device's storage card. You can also review your and your friends' pictures on Facebook and Flickr.

1. Press  and tap  > **Gallery**.
2. At the top right of the screen, tap the arrow to open the menu and select the gallery you want to view (Albums, Facebook, or Flickr).
 - For **Albums**, tap an album and scroll through the available pictures and videos. Press  for more options.
 - For **Facebook** and **Flickr**, tap a friend (or yourself) from the list to view posted pictures. You must be signed on to Facebook or Flickr to access those galleries. (See "Facebook, Flickr, and Twitter" on page 23.)




Share

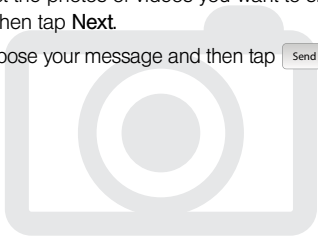1. Press  and tap  > **Gallery**.
2. Tap the album for the photos or videos you want to share.
3. Tap , and then on the Share via menu, tap a sharing option (**Bluetooth, Facebook, Facebook for HTC Sense, Flickr, Gmail, or Mail**, etc.).
4. Select the photos or videos you want to share and then tap **Next**.
5. Compose your message and then tap .





Find sports scores, news, and weather. Shop online. On-the-go access lets you browse full-color versions of your favorite websites.

Go Online

1. Press  and tap  > **Internet**.
2. From the Sprint home page, select categories, navigate to websites, read blogs, download content, and more.
 - Tap a category to open it.
 - For more options, press  from any page. Options may include **Home**, **Find on page**, **Select ext**, **Page info**, and **Print**. Tap **More** for additional options including Share page, Downloads, History, and Settings (including an option to view full versions of pages instead of mobile versions).
 - To scroll, slide your finger up or down the page.
 - To zoom in or out, pinch the screen.

Downloading Applications From the Web





You can download applications while browsing the Web, but you must first set permissions in settings to allow applications from unknown sources. Applications downloaded from Android Market (see page 21) do not require additional permissions.

1. Press  >  > and tap **Settings** > **Applications**.
2. Select the **Unknown sources** check box.
3. When the Attention dialog box opens, read the disclaimer and tap **OK**.

Android Market

Android Market™ gives you access to thousands of applications to boost your productivity and increase your fun.


Download Applications and Games

1. Press  and tap  > **Market**.
2. The first time you visit Android Market, tap **Accept** to accept the Terms of Service.
3. To find what you want quickly:
 - Browse through featured apps and games. Scroll through the options or browse by categories within **Apps** or **Games**.
 - Search for an app or game. Tap **Search**  on the Android Market home screen, enter the name or key word, and then tap  to the right of the search box.
4. Tap an app or game to read a description and user reviews.

5. Tap **Install** (for free applications) or **Buy** (for paid applications).





Note: You must have a Google (Gmail) account set up on your device to purchase and download applications from Android Market.

Opening Installed Applications and Games

- Press  and tap . Locate the downloaded item and tap it to launch. You can also launch from the **Market** >  > **My apps** screen.

Google™ Mobile Services

Your HTC EVO View 4G with Google provides easy access to a variety of Google services including Gmail™, Google Voice™, Google Maps™, Google Navigation, and YouTube™.

- **Gmail** – The Google mail service. Your Gmail account lets you access many Google-related services as well as Android Market. (See “Set Up a Gmail Account” on page 16.)
- **Google Maps and Google Navigation** – The Google location programs let you track your current location, view real-time traffic situations, and receive detailed directions to your destination. They also provide search tools where you can locate places of interest or an address on a vector or aerial map, or view locations in street level. Press  and tap  > **Maps** or **Navigation** to begin using the services.
- **YouTube** – View and share videos on one of the Web’s most popular video sites. Press  and tap  > **YouTube** to browse through and view available videos. Sign in with your Gmail account to upload your own videos.

Facebook, Flickr, and Twitter

If you didn't set up your favorite social media applications using the setup application (see "Setup Application" on page 3), you can do it from the Accounts & sync menu.

Set Up Social Media Accounts

1. Press  and tap  > **Settings > Accounts & sync.**
2. Tap **Add account**, select a type (Facebook, Flickr, Twitter), and then follow the instructions to complete setup.

*Tip: To remove an account, from the Accounts & sync page, tap the account and then tap **Remove account**.*

Access Your Accounts

1. Press  and tap  > **Facebook, Flickr, or Twitter.**
2. Enter your required sign-in information.

3. Send status updates, share pictures, read updates, and more.

Use Friend Stream

Friend Stream lets you update and access your Facebook, Twitter, and other social media accounts simultaneously.

1. Press  and tap  > **Friend Stream.**
2. Sign in to at least one social media account (such as Facebook).
3. Update your status simultaneously for all accounts you're signed in to and view consolidated status updates, pictures, and links.

*Tip: To make the most of Friend Stream, you can add the Friend Stream widget to an extended screen. Press and hold on an unused screen, tap **Widget > Friend Stream**, and select a widget style.*

Your HTC EVO View 4G lets you use the preloaded Qik application to share live videos and have live mobile video chats with compatible mobile devices.

Set Up a Qik Account

Before using Qik on your device, you must create a Qik account and sign in on your device.

- Visit qik.com, click **Sign Up**, and follow the instructions to set up an account.



Qik Overview

1. Press  and tap  > **Qik**.
2. If prompted, sign in to your Qik account.
3. Press  > **Settings** to set your preferences, including sharing preferences, location settings, video quality, and version information.

Tip: The front-facing camera is best for video chat. Also, use the device in widescreen mode for videos.




4. Select from the main Qik options: **Video Chat**; **Record and Share**, to record videos to store directly in your Qik account and to share with others; **Video Mail**, **Messages** to quickly send and view video messages, and **Video Gallery** to manage and share your videos.

Live Mobile Video Chat With Qik




1. Press  and tap  > **Qik**.
2. Tap **Video Chat**.
3. Select a contact.
 - To complete a video chat, the contact must have a compatible wireless device and a Qik account.
4. Speak directly to your chat partner. Using the front-facing camera, you will see your image in one corner and the other party's image will cover the rest of the screen.

Bluetooth

Pair and Connect With a Bluetooth®-Capable Device

1. Press  >  > and tap **Settings > Wireless & networks > Bluetooth settings > Scan for devices.**
 - If Bluetooth is not turned on, tap the **Bluetooth** check box to turn it on.
2. Select an available device and follow the prompts to pair the devices. You may be required to enter a passcode (often 0000) to complete pairing.
3. Once you're paired with a device, your connection should launch. The Bluetooth icon () shows your current connection status.



Share Contacts, Files, or Pictures Using Bluetooth

1. Open the application containing the file you want to share. (For example, press  and tap  > **Gallery**).
2. Locate the file you want to share.
 - You can send pictures and videos directly from the camera or from Gallery, Calendar events, Contacts (as vCards), music tracks, and voice recordings. Not all devices will be able to receive all file types.
3. Depending on the application, tap  > **Bluetooth** or press and hold the file and select **Share (or Send) > Bluetooth**.
4. Tap the name of the device to which you're sending the file. (If prompted, tap **Yes** to turn Bluetooth on.)

Sprint Mobile Hotspot

Connect up to eight Wi-Fi capable devices to the Internet using your EVO as a mobile hotspot.

Set Up Your Sprint Mobile Hotspot

1. Press  >  > **Settings** > **Wireless & networks** > **Sprint Hotspot settings**.
2. Read the introduction and tap **OK** to continue.
3. Tap the Router name (SSID) text box to enter a new router name, or use the default router name.
4. Select a Wi-Fi network security method in the Security box. Depending on the security method selected, you may need to add a network key (password) in the Password box.
5. Tap the **Sprint Mobile Hotspot** check box at the top of the screen to turn on the wireless router.

Connect to Sprint Mobile Hotspot

1. Enable Wi-Fi on your device.
2. Select “Wi-Fi Router” (or the new router name, if you didn’t use the default) from the list of available networks.
3. When “Connected” appears on your device, launch your Web browser to confirm you have an Internet connection.

HTC Sync

Sync Windows contacts and calendar events with those on your EVO, back up data from your device to your computer, install third-party apps, and more.

Install HTC Sync on Your Computer

1. Connect the device to your computer using the USB cable provided.
2. On the Connect to PC screen on your device, tap **Disk drive**, and then tap **Done**.
3. On your computer, download **HTCSync.exe** from htc.com/us/support to your computer's desktop.
4. Double-click **HTCSync.exe** on the desktop and then follow the onscreen instructions.

Set Up HTC Sync

1. With your device connected to your computer, tap **HTC Sync**, and then tap **Done**.
2. Once your device finds HTC Sync, your computer will display the Connection Wizard. Click **Next**.

3. Enter the name you want for your device, and then click **Finish**.



Sync Your Device With Your Computer

1. Run HTC Sync from your computer.
2. The first time you synchronize the device, the Synchronization Settings Wizard will launch and help you set up HTC Sync.
 - If the Synchronization Settings Wizard doesn't start, click **Synchronize Now**.
3. Follow the prompts to select the computer applications and categories to sync and when to sync data between your device and your computer.
4. Confirm the settings you have chosen and click **Finish**.


GPS Navigation

 
TeleNav GPS Navigator lets you see and hear turn-by-turn directions to a known address, or find nearby restaurants, stores, banks, or gas stations. Get information about traffic and alternate routes

Navigate

1. Press  and tap  > TeleNav GPS Navigator.
2. Follow the onscreen instructions to access, launch, and use.

Note: Before using any navigation programs, make sure your device is set to allow location detection, and then select which sources you want to use.

Press  > Settings > Location > Location setting > On to allow location detection. Select **Use wireless networks** and/or **Use GPS satellites** for location sources.

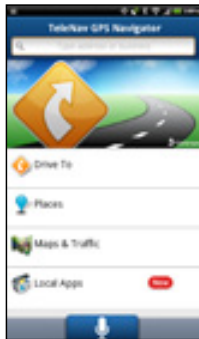




Adding Music to Your Music Folder

Before you can listen to music with the **Music** application on your device, you will need to load songs into your Music folder.

1. Use the supplied USB cable to connect your device to an available USB port on your computer.
2. When you see the Connect to PC screen, tap **Disk Drive** and then tap **Done**.
3. On your computer, locate the your device's internal storage, and open or create the Music folder.
4. Copy music files from your computer to the music folder.
5. When you are done, follow your computer's procedures to safely remove the drive, and then disconnect the device from the USB cable.

Listening to Music

1. Press  and tap  > **Music**.
2. Tap a song to begin playing.
 - Use the controls at the bottom to play, pause, or skip songs.
 - Tap  to display the music library.





Tools & Resources: Settings

Explore ways to customize your device, set permissions, update your software, and more in the **Settings** menu.

Accessing Settings

1. Press  and tap  > **Settings**.

– or –

 
Press  >  > and tap **Settings**.

2. Select the settings category you want to change. To select or clear check boxes (a common setting method), tap the check box.

Categories include:

- Personalize
- Wireless & networks
- Sound
- Display
- Accounts & sync
- Location
- Search
- Pen

- Privacy
- Connect to PC
- Security
- Dock
- Power
- Applications
- Storage
- Date & time
- Language & keyboard
- Accessibility
- Voice input & output
- System updates
- About tablet

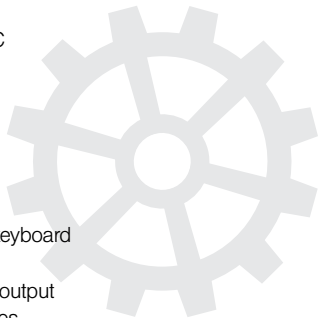

For detailed information about settings, please see the **User Guide** at sprint.com/support.

Battery-Saving Tips



Manage the Display Brightness and Screen On-Time

1. Press  >  > **Settings** > **Display** > **Brightness** to modify the backlight setting as desired.
2. To turn off the screen, briefly press the power button on top of the device (). The device will continue to function.

— or —



Add a Power Control widget to your Home screen. (See “Customize Your Home Screen” in this guide for more information about adding widgets.)

Use the Back Key to Exit Applications



- When you exit applications, press the Back key () instead of pressing  . This ends the application instead of leaving it running in the background.

Manage Your Device's Wireless Functions

Disable the 4G, Sprint Mobile Hotspot, Wi-Fi, Bluetooth, and GPS functions of the device when you're not using them.

- Press  >  > **Settings** > **Wireless & networks** and clear the **4G**, **Sprint Hotspot**, **Wi-Fi**, or **Bluetooth** check boxes to disable any of these functions that are not in use.

— or —

- Press  >  > **Settings** > **Location** and clear the **Use GPS satellites** check box to disable the GPS function.

For more useful tips about battery care and safety, see the *User Guide* at sprint.com/support.

Manage Your Account

Online: www.sprint.com





- make a payment, see your bills, enroll in online billing
- check data usage and account balance
- see or modify the details of your Sprint service plan
- get detailed instructions and download content

By Phone

- Sprint Customer Service:
Dial 1-888-211-4727
- Business Customer Service:
Dial 1-888-788-4727

Resources

Resources For Your Phone

- This *Get Started Guide* to get you up and running.
- **Web** – Visit sprint.com/support for the complete User Guide, along with videos, tutorials, and community forums for your HTC EVO View 4G.
- **Mobile Guide** – Press  and tap  > HTC Mobile Guide to access a mobile version of the full User Guide.
- **Sprint Zone** – Press  and tap  > **Sprint Zone** to access account services, Sprint news, phone information, suggested applications, and more.

Visit sprint.com/support for the complete User Guide, along with videos, tutorials, and community forums for your HTC EVO View 4G.

Be a hero. Don't drive distracted.



Focus on driving

sprint.com/focusondriving

Index

Symbols

4G 15

A

Android Market 21

Apps 21

B

Bluetooth 3, 19, 25

Buttons 9

C

Camera

Front-facing 24

Settings 18

D

Drag 5

E

Email

 Gmail 16

 Microsoft Exchange

 ActiveSync 16

 POP3/IMAP 16

F

Facebook 19, 23

Flick 4

Flickr 23

Friend Stream 23

Front-facing Camera 24

G

Games 21

Gestures 4–5

Gmail 16

Google Maps 22

Google Navigation 22

Google Voice 22

GPS Navigation 28

H

Home Screen 6

Add Items 7

Customize 7

Extended 6

HTC Mobile Guide 33

HTC Sync 27

I

Internet 20

K

Keyboard 10

Settings 11

Keys 9

M

- Maps 22
- Microsoft Exchange ActiveSync 16
- Mobile Guide 33
- Multimedia Messages 14

N

- Navigation
 - Google 22
 - GPS 28

P

- Picture Messages 14
- Pictures
 - Take 18
- Pinch 5
- Predictive Text 11
- Press and hold 4

Q

- Qik 24
 - Video Chat 24
- QWERTY Keyboard 10

R

- Rotate Screen 5

S

- Scenes 7
- Screen
 - Turn On and Off 2
 - Unlock 1
- Setup Application 3
- Shortcuts 9
- Slide 5
- Sprint 4G 15
- Sprint Customer Service 32
- Sprint Zone 32
- Status Bar 8

T

- Tap 4
- Text Messages 14
- Twitter 23

U

- Unlock Screen 1

V

- Video Chat 24
- Videos
 - Record 18
 - Share 19

W

- Wallpaper 7
- Widgets 7
- Wi-Fi 15

Y

- YouTube 22

The services described in this guide may require a subscription to a service plan and/or may incur additional charges. Not all services will work on all devices. Sprint 4G coverage is not available in all markets. See www.sprint.com/coverage for more details.

Portions of this guide are reproductions of work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.

Important Privacy Message. Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

©2011 Sprint. SPRINT and the logo are trademarks of Sprint. Other marks are property of their respective owners.

Printed in Taiwan



91H01805-00M Rev.A