



Get started _

All you need to know to get going.



Welcome! _



Get Your Phone Ready _

Sprint is committed to developing technologies that give you the ability to get what you want when you want it, faster than ever before. This booklet introduces you to the basics of getting started with Sprint and your new LG Rumor Touch.™

Only on the Now Network.™

▶ **Insert the Battery**

1. Remove the battery compartment cover on the back of the phone by pressing down and sliding the cover in the direction of the arrow on the back cover.
2. Insert the battery into the battery compartment and gently press down until it clicks into place.
3. Replace the battery cover.

▶ **Charge the Battery**

1. Plug the phone charger into an electrical outlet.
2. Plug the other end of the charger into the phone's charger/accessory jack.

▶ **Turn the Phone On**

- Press and hold  to turn the phone on.

Activate Your Phone _




▶ Activate Your Phone

- If you purchased your phone at a Sprint Store, it is probably activated and ready to use.
- If you received your phone in the mail, and it is a new Sprint account or a new phone number, your phone is designed to activate automatically when you first turn it on. To confirm your activation, make a phone call.
- If you received your phone in the mail and it is going to be activated on an existing number (you're swapping phones), go to sprint.com/activate and follow the instructions.

When you have finished, make a phone call to confirm your activation. If your phone is still not activated or you do not have access to the Internet, contact Sprint Customer Service at **1-888-211-4727** for assistance.




▶ Switch to Spanish Menus *(optional)*

1. Press  and touch **Main Menu > Settings > Language (Idioma)**.
2. Touch **Español**.

Make Your First Call _



▶ Make Your First Phone Call

1. Press  and tap the digits of the number you want to call on the dial pad.
2. Touch .
3. When you're finished, touch .

Voicemail _



▶ Set Up Your Voicemail

All unanswered calls are automatically transferred to your voicemail, even if your phone is in use or turned off. You should set up your voicemail and personal greeting as soon as your phone is activated:

- Touch and hold **1** and follow the system prompts to create your passcode and record your name and greeting.

Voicemail Passcode

(do not share): _____

Sprint strongly recommends setting a voicemail passcode. Without a passcode, anyone who has access to your phone can access your messages and place outbound calls through your wireless account.

▶ Retrieve Your Voicemail

From your phone:

- To use One Touch Message Access, touch and hold **1**.
- To use the phone's menu, press **Home** and touch **Main Menu > Messaging > Voicemail** and touch **Call**.

From any other phone:

1. Dial your wireless phone number.
2. When your voicemail answers, press *****.
3. Enter your passcode.

Contacts _



▶ Save a Phone Number

1. Press **Phone**, enter a phone number, and touch **Save**.
2. Touch **New Entry** or **Existing Entry**.
3. For **New Entry**, select a type for the number (such as **Mobile, Home, Work, Pager, Fax, Other**), enter a name, and add other information as needed. For **Existing Entry**, select the entry, select a type, and add other information.
4. Touch **Done**.


▶ Retrieve a Phone Number

1. Press **Home** and touch **Contacts**.
2. Scroll through the entries, or use your QWERTY keyboard to enter the first few letters of the contact entry.
3. To display an entry, touch it. To call the contact, touch **Call**.

Messaging _



► Send a Text Message

1. Press  and touch **Send Message**.
2. Select a recipient from recent messages, touch **Go To Contacts** to select a recipient from your contacts, or touch **New Addr** to enter a phone number or email address by hand.
3. Touch the text entry area, and use your external keypad or QWERTY keyboard to enter a message, or touch **Preset Msgs** to choose from preset messages.
4. Touch **Done** > **Send**.

► Send a Picture or Video (MMS) Message

1. Follow steps 1 - 2 above.
2. Touch **[Add Attachment]**.
3. Touch a media type (**Picture**, **Video**, **Audio**, etc.).
4. Touch a picture or clip to select it, and touch **Attach**.
5. If you are satisfied with your message, touch **Send**.

Pictures and Video _



► Take a Picture

1. Press and hold the side camera button to activate the phone's camera.
2. Using your display as a viewfinder, aim the camera lens at your subject, and tap **CAPTURE**, or press the camera button.
3. Touch **Take New Picture** or press the camera button to return to Camera mode, or touch **More** to explore other options, including sending the picture.

► Record a Video

1. Press the side camera button and touch **Camcorder** > **Video Mail** or **Long Video** to activate the camcorder.
2. Using your phone's display screen as a viewfinder, aim the lens at your subject, and touch **RECORD** or press the camera button to begin recording.
3. Touch **Done** or press the camera button to stop recording.
4. Touch **Take New Video**, **Send**, or **More** to explore other options.

Resources _



► For Your Phone

- This *Get Started Guide* to get you up and running.
- **Features Guide** – Get the most from the services and features available on your new Sprint phone.
- **User Guide** – View the comprehensive *User Guide* to the Rumor Touch™.
- **Web** – Go to sprint.com/support to download the latest version of the *User Guide*, and to access troubleshooting and other resources.

► For the Environment

Recycle your old phone safely and conveniently using the addressed recycling envelope packaged with your new phone. Visit sprint.com/recycle for more details.

sprint.com/begin _

- Visit sprint.com/begin to discover all you can do with your phone and Sprint service. Explore all your options, find ways to personalize your experience, even vote for your favorite features. It's a whole new beginning.