



Get started

All you need to know to get going.

Samsung GALAXY Tab™



Welcome! _

Sprint is committed to developing technologies that give you the ability to get what you want when you want it, faster than ever before. This booklet introduces you to the basics of getting started with Sprint and your new Samsung Galaxy Tab™. As you'll quickly discover, it's easy to customize with apps from Android Market™, browse the Web at 3G speed, send email, text, or picture messages, watch movies or TV programs, get turn-by-turn driving directions, or connect up to five Wi-Fi devices to the Internet with Sprint Hotspot. Because there's less waiting, and more doing, on the Now Network.™



The services described in this guide may require a subscription to a service plan and/or may incur additional charges. Not all services will work on all devices. Coverage is not available everywhere. See www.sprint.com/coverage for more details.

Important Privacy Message. Sprint's policies often do not apply to third-party applications. Third-party applications may access your personal information or require Sprint to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.


©2010 Sprint. SPRINT and the logo are trademarks of Sprint. Android and Android Market are trademarks of Google, Inc.

Get Your Device Ready _


▶ Charge the Battery

1. Attach the outlet connector to the charging head.
2. Plug the USB cable into the charging head and plug the other end into the device.
3. Plug the charger head into an electrical outlet.

▶ Turn the Device On

- Press and hold  (the black button located at the top of the device on the right side) to turn your device on.

▶ Unlock the Screen

- Touch and hold the lock icon  and drag it to the right of the screen.

Note: When you turn on your device for the first time, you will be given options to let you quickly set up various accounts, such as your Google™ account, Facebook™, and email accounts. We recommend that you skip these.

▶ Turn Off the Display Screen

- Press .



Activate Your Device _

 
▶ Activate Your Device

- If you purchased your device at a Sprint Store, it is probably activated and ready to use.
- If you received your device in the mail, and it is a new Sprint account, your device is designed to activate automatically when you first turn it on. To confirm your activation, open an Internet address in your device's Web browser. (See "Web" in this guide.)
- If you received your device in the mail and it is going to be activated on an existing account (you're swapping devices), go to sprint.com/activate and follow the instructions.

When you have finished, open an Internet address in your device's Web browser to confirm your activation. (See "Web" in this guide.) If your device is still not activated or you do not have access to the Internet, contact Sprint Customer Service at **1-888-211-4727** for assistance.



Your Samsung Galaxy Tab™ _

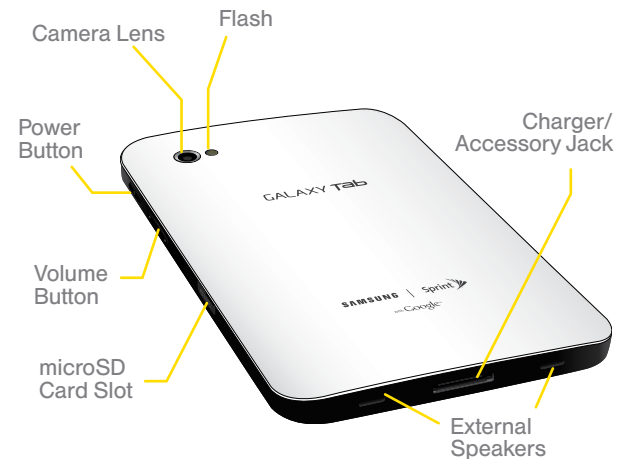


Getting Around Your Device _

► Move Around Your Device's Menus and Screens


Tap: When you want to type using the onscreen keyboard, select items such as application and settings icons, or press onscreen buttons, simply tap them with your finger. A light touch works best.

Press and hold: To open the available options for an item (for example, a link in a Web page), simply press and hold the item.

 
Flick: Move your finger in lighter, quicker strokes than swiping. This finger gesture is always used in a vertical motion, such as when flicking through contacts or a message list.

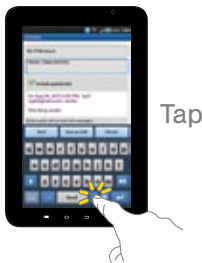

Tap

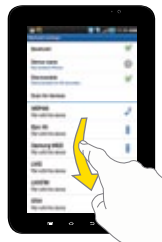 

Flick

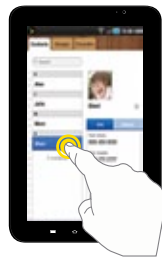 


Press and hold

Swipe or slide: Quickly drag your finger vertically or horizontally across the screen.

Drag: Press and hold your finger with some pressure before you start to move it. Do not release your finger until you have reached the target position.

Rotate: Automatically change the screen orientation from portrait to landscape by turning the device sideways.


 
Pinch or Spread: “Pinch” the screen using your thumb and forefinger to zoom out or “spread” the screen to zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)

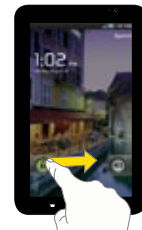

Swipe, Slide or Drag





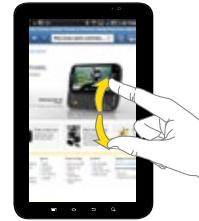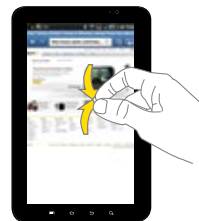  

Rotate



Pinch and Spread




Contacts _

▶ Add a New Entry to Contacts

1. Press  and tap  >  > .
2. Under **Save contact to**, tap **Device** to save the contact to your device.
—or—
Tap **Google** to save the contact to your Google contacts list, if available.
—or—
Tap **Microsoft Exchange** to save the contact to your corporate contacts list, if available.
3. Tap the **First name** field and enter the contact's first name using the onscreen keyboard.
4. Tap the **Last name** field and enter the contact's last name.

5. Tap the label button to the left of the **Phone number** field to select a phone type such as **Mobile**, **Work**, **Fax**, or **Pager**.
6. Tap the **Phone number** field and enter the phone number.
7. Enter any additional information such as **Email**, **IM**, and **Postal address**.
8. Tap **Done** to save the entry.


▶ Retrieve a Phone Number

1. Press , tap  > , and then tap the search window at the top left of the Contacts tab.
2. Enter the first letter or letters of an entry and other information.
3. Tap the contact to display the contact's phone number(s).

Customize Your Home Screen _

Put your favorite applications right on your Home Screen, ready to access with just a tap of your finger.

▶ Add a Widget, Shortcut, Folder, or Wallpaper

1. Press  and touch and hold on an empty area of the screen.
2. On the **Add to Home screen** window, tap the item you wish to add (**Widgets**, **Shortcuts**, **Folders**, or **Wallpapers**).

For example, to add a Facebook widget:

Note: If you are not logged on to your Facebook account, do so now by tapping  >  > .






1. On the **Add to Home screen** window, tap **Widgets** > **Facebook**.
2. If the widget is too large for the free space on the screen, it will automatically move to the next screen with available space.

 
From your new Facebook widget, you can access your Profile, Friends, Photos, and many other of your favorite Facebook features.

Messaging _

Keep in touch your way using text and picture messaging or email. Easy access to AOL, Hotmail, Yahoo!® Mail, and Gmail.




► Send a Message

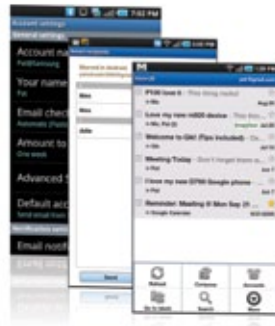1. Press  and tap  >  > .
2. Enter the phone number of the recipient in the **To:** text box.
3. Tap **Enter message here** and then type your message.
4. To send a text-only message, skip to step 8.
–or–
To add an attachment to your message, tap  (to the left of the text field).





5. Tap a media type (**Picture**, **Video**, etc.) and then tap an available file or folder.
6. Tap a picture of clip to select it.
7. Add additional pictures or clips, if desired.
8. If you are satisfied with your message, tap **Send**.

► Set Up an Email Account

1. Press  and tap  > .
2. Tap your email provider (**Yahoo!**, **Gmail**, **AOL**, etc.) to select it.
3. Enter the **Username** (or **Email address**) and **Password** for the email account and then tap **Next**.
4. Enter an **Account name** and **Your name** and tap **Done**.

► Check for New Email Messages





1. Press  > , and then tap **Notifications**.
2. Tap an email message to read it.






Camera & Camcorder _





Capture your life's moments as stunning photos or crisp videos and share them at a touch of the screen or watch them on your computer or TV.


▶ Take a Picture or Record a Video

1. Press  and then tap  > . If taking a video, touch and drag the slider to .
2. Hold the device in either landscape or portrait orientation for pictures, or landscape orientation for video, and frame your subject in the screen.

3. Tap  to take a photo
—or—
Tap  to begin capturing video, and tap  to stop recording.
4. Tap the image icon on the screen to **Share**, **Set as**, or **Delete** your picture, or to **Share**, **Play**, or **Delete** your video.





▶ Share

1. Press  and tap  > .
2. Tap the album for the photos or videos you want to share.
3. Press  and then tap the photos or videos you want to share to select them. (Use the change view slider at the upper right of the image to switch from folder view to thumbnail view if needed.)

4. Tap , and then on the **Share via** menu, tap a sharing option such as **Email**, **Messaging**, or **Gmail**.
5. Address and compose your message and then tap **Send**.

▶ View Your Photos and Videos

1. Place your device in the optional desktop charging station, and connect an HDMI cable (optional) to the HDMI jack on the right side of the charging station.
2. Make sure the external display device is turned off, and then connect the other end of the HDMI cable to the HDMI jack on the external display device.



3. Turn on the external display device and then select the HDMI video input. Refer to the display's documentation for details.
4. On your device, press  and tap  > .
5. Open a photo or video album, and then do either of the following:
 - Start a photo slideshow by pressing  and tapping **Slideshow**.
 - Tap a video to start playing it on the screen.

Your picture or video should appear on the external display device.

Wi-Fi _

Connect to a Wi-Fi network with one quick touch to check email, access a corporate intranet, or browse the Web.

▶ Connect

1. Press  >  > and tap **Settings** > **Wireless and network** > **Wi-Fi settings**.
2. Tap the **Wi-Fi** check box to turn Wi-Fi on.
3. Tap a Wi-Fi network to connect. If necessary, enter a password and tap **Connect**.






Sprint Hotspot _

Connect up to five Wi-Fi capable devices to the Internet using your device as a mobile hotspot.



▶ Set Up Your Sprint Hotspot

1. Press  and then tap  > .
2. Make sure the **Sprint Hotspot** check box is selected and tap **Sprint Hotspot Settings**.
3. Tap the **Router name (SSID)** text box to enter a new router name, or use the default router name.

4. Select a Wi-Fi network security method in the **Security** box. Depending on the security method selected, you may need to add a network key (password) in the **Password** box.
5. Make sure the **Hide my device** check box is selected so that other devices can find your Sprint Hotspot.






▶ Connect to the Sprint Hotspot

1. Enable Wi-Fi on your device.
2. Select “SPH-P100XXX” (where XXX represents a three-digit number unique to your device) or the new router name, if you didn’t use the default, from the list of available networks.
3. When “Connected” appears on your device, launch your Web browser to confirm you have an Internet connection.

Web _

Find sports scores, news, and weather. Shop online. On-the-go access lets you browse full-color versions of your favorite websites.

▶ Go Online

1. Press  and tap  > .
2. Press  and enter a URL (Web address) or key word(s) in the search box.
3. Tap a suggested entry from the screen, or tap the arrow to the right of the search box to go to the URL you entered.
 - For more options, press  from any page.








Android Market™ _

Personalize your device with a huge selection of apps, games, ringtones, and screen savers.



▶ Browse and Download





1. Press  and tap  > .
2. The first time you visit Android Market™, a Terms of Service window will appear. Tap **Accept** to continue.

3. To find what you want quickly:
 - Browse through featured apps and games. Scroll through the list when you open Android Market.
 - Browse by categories. First, tap **Apps** or **Games**, and then tap a category. You can filter the category by **Top paid**, **Top free**, or **Just in**.
 - Search for an app or game. Tap , enter the name or key word in the **Search Android Market** search box, and then tap  to the right of the search box.
4. Tap an app or game to read a description and user reviews.
5. Tap **Install** (for free applications) or **Buy** (for paid applications).

Samsung Media Hub _

Rent, buy and download your favorite TV shows and movies and watch them on your Galaxy Tab, or share them with up to five other devices.

► Find

1. Press  and tap  > .
2. Tap **Movie Store** or **TV Store**, and browse through a category or press  to find a specific title.
3. Follow the onscreen instructions to buy or rent a program or movie.






* This feature may not be available on your device at the time of purchase.

GPS Navigation _

Google Maps Navigation lets you see and hear turn-by-turn directions to a known address, or find nearby restaurants, gas stations, and parking. Get information about traffic and alternate routes.



► Navigate

1. Press  and tap  > .
2. Read the disclaimer and tap **Accept**.
3. Tap an option (**Speak Destination**, **Type Destination**, **Contacts**, or **Starred Items**) and specify a destination.



Battery-Saving Tips _








▶ Manage the Display Brightness and Screen On-Time

1. Press  >  > **Settings** > **Display settings** > **Brightness** to modify the backlight setting as desired. (Enabling **Automatic brightness** will ensure that your screen's backlight matches existing light conditions.)
2. To turn off the screen, press the **Power** button. The device will continue to function.
—or—

Add a power control widget to your Home screen. (See “Customize Your Home Screen” in this guide for more information about adding widgets.)

▶ Manage Your Device's Wireless Functions

Disable the Sprint Hotspot, Wi-Fi, Bluetooth, and GPS functions of the device when you're not using them.

- Press  >  > . Uncheck the **Sprint Hotspot** box if this function is not in use.
—or—
- Press  >  > **Settings** > **Wireless and network** and disable Wi-Fi and Bluetooth if these functions are not in use.
—or—
- Press  >  > **Settings** > **Location and security** and uncheck the **Use GPS satellites** box to disable GPS.







For more useful tips about battery care and safety, see the *User Guide* at www.sprint.com.

 



 

Manage Your Account _

▶ Online: www.sprint.com

- make a payment, see your bills, enroll in online billing
- check data usage and account balance
- see or modify the details of your Sprint service plan
- get detailed instructions and download content

▶ From Any Sprint Phone

- Press  **4**   to check data usage and account balance
- Press  **3**   to make a payment

- Press  **2**   to access a summary of your Sprint service plan or get answers to other questions
- Press  **7**   to add a new line of service, upgrade your device, purchase accessories, or access other account services

▶ From Any Other Phone

- Sprint Customer Service:
Dial **1-888-211-4727**
- Business Customer Service:
Dial **1-800-927-2199**



Resources _

▶ For Your Device

- This *Get Started Guide* to get you up and running.
- **Basics Guide** – Get the most from the services and features available on your new Samsung Galaxy Tab.
- **Web** – Visit www.sprint.com to access the *User Guide*, how-to videos, tutorials, and helpful support information.

▶ Sprint 411

Dial 411 from any Sprint phone for nationwide listings, movie show times, restaurant reservations, driving directions and more. Spanish-speaking operators are available. See sprint.com for pricing and more details.

▶ For the Environment

Recycle your old phone safely and conveniently using the addressed recycling envelope packaged with your new device. Visit sprint.com/recycle for more details.



