

Get
Started

All you need to know to get going.

Samsung GALAXY S II
Epic™ 4G Touch

Sprint 



Welcome!



Sprint is committed to developing technologies that give you the ability to get what you want when you want it, faster than ever before. This booklet introduces you to the basics of getting started with Sprint and your Samsung Galaxy S™ II, Epic™ 4G Touch.

Visit sprint.com/support for the complete User Guide, along with videos, tutorials, and community forums for your phone.

Using This Guide

This Get Started guide is designed to help you set up and use your new Epic™ 4G Touch. It's divided into four sections to help you find the information you need quickly and easily.

 
 
■ Get Ready — page 1 — *Find out what you need to do before you use your device the first time, including inserting a battery and activating Sprint service on your device.*

■ Android Basics — page 4 — *Learn some basics about how to move around on your device, use the home screen, and enter text. If you're familiar with Android devices, you can probably skip these pages (although a refresher course never hurt anyone).*

■ Use Your Device — page 13 — *Take advantage of your device's features and Sprint services, from the basics (Making Calls) to the more advanced (using Android Market, Qik, and more).*

■ Tools & Resources — page 32 — *Find useful tips for your device and discover resources and other helpful Sprint information. For additional information including the full User Guide, videos, tutorials, and community forums, visit sprint.com/support.*

Your Epic™ 4G Touch

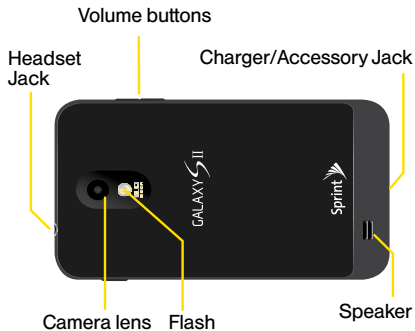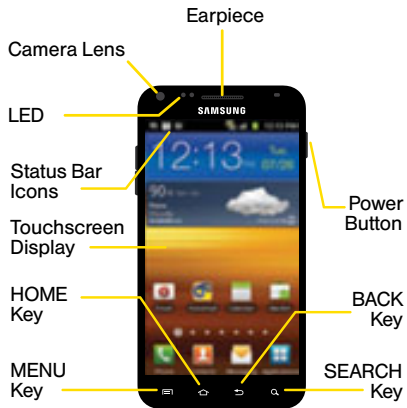

Get Your Device Ready

Install the Battery

1. Remove the battery compartment cover on the back of the device.
2. Align the battery's contacts with those inside the battery compartment and gently press down until the battery is seated.
3. Replace the back cover.

Charge the Battery

1. Insert the USB cable into the charging head.
2. Insert the small end of the USB cable into the Charger/Accessory Jack.
3. Plug the charging head into a standard AC power outlet.

Turn the Device On

- Press and hold the power button.

View Your Home Screen

- After you turn the device on, swipe the touchscreen display up.

Switch to Spanish Menu (optional)

1. Press  >  and tap **Settings** > **Language and keyboard**.
2. Tap **Select language** > **Español**.

Activate Your Device

Activate Your Device

- If you purchased your device at a Sprint Store, it is probably activated and ready to use.
- If you received your device in the mail, and it is for a new Sprint account or a new line of service, your device is designed to activate automatically when you first turn it on. To confirm your activation, make a phone call.
- If you received your phone in the mail and it is going to be activated on an existing number on your account (you're swapping phones), you can activate on your computer online or directly on your phone.

Activate on your computer:

- Go to sprint.com/activate and follow the instructions.

Activate on your phone:

Note: For security reasons, you will need your Sprint phone number and PIN to use this activation method.

1. Turn on your new phone. (Make sure the old one is turned off.) Your phone will automatically attempt Hands-Free Activation.

Note: Your phone will need to complete one hands-free activation attempt before you can continue.

2. Tap **Activate** to override auto-activation and start the manual activation wizard.

Note: If you don't override Hands-Free Activation, your phone will attempt to auto-activate five times. Wait for Retry to appear on your screen. Tap Retry and then tap Activate.

3. Follow the on-screen prompts to complete the activation process.
4. After you have completed the wizard, make a phone call to confirm your activation.

If your phone is still not activated, contact Sprint Customer Service at **1-888-211-4727** for assistance.



Sprint ID

Once your device is activated, you can install an initial ID Pack. ID Packs are bundles of applications, ringtones, wallpapers, settings, and more. ID Packs are installed using an application called Sprint ID.

You can install as many as five ID Packs at any one time in addition to the default My ID pack. You can easily switch from one ID Pack to another without losing any applications already installed. For example, when you install the Sprint ID Pack, Sprint applications such as Sprint TV, TeleNav™ GPS Navigator, NASCAR Sprint Cup Mobile, and Sprint Football Live will remain in your applications.



Install Your First ID Pack

Note: Your device must be activated, your battery should be fully charged, and you should be in a network coverage area before you install an ID Pack.

1. Press  >  and tap **Sprint ID**.
2. Tap **Get New**.

3. Tap an ID Pack on the Sprint ID screen.
4. Read the information screen for a description of the ID Pack and tap **Install**.
5. Read the Terms & Conditions and tap **Agree**.
6. Wait for the download and install to finish. (If prompted, tap **Complete Install**.)
7. Tap OK.

Switch ID Packs

1. Press  >  and tap **Sprint ID**.
2. Tap **Switch IDs** and tap an ID Pack to replace your current pack.

—or—

Tap **Get New** to install a new ID Pack and follow steps 2-6 of “Install Your First ID Pack.”

Note: Certain features of Sprint ID are subject to change. For the most up-to-date information about using Sprint ID, see the User Guide at sprint.com.

Android Basics: Getting Around Your Device

Move Around Your Device's Menus and Screens Using Gestures

 
Your device's touchscreen lets you control everything through various types of touches, or gestures.

Tap: When you want to type using the onscreen keyboard, select items such as application and settings icons, or press onscreen buttons, simply tap them with your finger. A light touch works best.

Press and hold: To display the available options for an item simply touch and hold the item.

Flick: Move your finger in lighter, quicker strokes than swiping. This finger gesture is always used in a vertical motion, such as when flicking through contacts or a message list.

Swipe or slide: Quickly drag your finger vertically or horizontally across the screen.

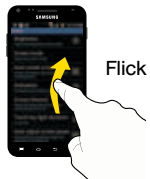

Drag: Press and hold your finger with some pressure before you start to move it. Do not release your finger until you have reached the target position.

Rotate: Activate the auto-rotate feature to automatically change the screen orientation from portrait to landscape by turning the device sideways.

Pinch and spread: "Pinch" and "spread" the screen using your thumb and forefinger to zoom out or zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)

Swipe: This unique feature allows you to enter a word by sliding a finger from letter to letter, lifting only between words. See page 10 for instructions on using this text input method.



Swipe, Slide
or Drag



Pinch and
Spread



Rotate




Swipe

Your Home Screen

Viewing Your Home Screen

Your device's Home screen extends horizontally to seven full screens. This gives you room to customize your device and put the things you need front and center, just a swipe away.

- To display the Home screen, press  from any screen.
- To view extended screens, swipe the screen left or right. There are six additional screens in addition to the main Home screen.



Status Bar

 
The status bar at the top of the Home screen lets you quickly see both your device status (connections, signal strength, battery, GPS) and any current notifications.




Notifications Panel



You can expand the notification area to provide more detailed information about the current onscreen notification icons.

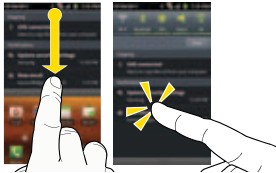1. Tap the status bar to reveal the Notifications tab, and then drag the tab to the bottom of the screen to open the Notifications panel.
2. Tap a notification entry to open the associated application.



Note: The Notifications panel can also be opened on the Home screen by pressing  and then tapping **Notifications**.

Customize Your Home Screen

1. Press  >  and tap **Add**.
2. On the Add to Home screen, touch the item you wish to add (**Widgets, Shortcuts, Folders, or Wallpapers**).

For example, to add a Power savings widget:

 
1. From the Add to Home screen, tap **Widgets** > **Power savings**. (Swipe or slide to view the available widgets.)
2. If the widget is too large for the free space on the screen, slide to a screen with sufficient space, and repeat step 1.

From your new Power savings widget, you can turn wireless capabilities (WiFi, Bluetooth, GPS, Sync, Brightness) on and off, and adjust the screen brightness.

Buttons and Keys



Epic™ 4G Touch Buttons and Keys

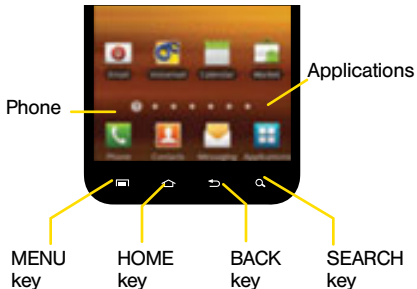
The bottom front of your device contains a row of four static keys that let you perform specific functions. Above the buttons, there is a program-dependent row of keys (they're always available from the unlocked Home screen).



- **Menu Key** (☰) – Press to open context-specific menus.
- **Home Key** (🏠) – Press to return to the main Home screen.
- **Back Key** (↶) – Press to return to the previous screen view.
- **Search Key** (🔍) – Press to launch a search within the current screen or application.
- **Phone Button** (📞) – Tap to open the phone screen.
- **Applications Button** (🗄️) – Tap to display the applications list.


Open Applications

 
- If an application is on one of your Home screens, just tap it to open it.
- If an application is not available from your Home screen, press  (if you're not already on the Home screen), tap  to display the applications list, and then tap the application from the alphabetical list. You may have to swipe the screen left or right to find the application you're looking for.

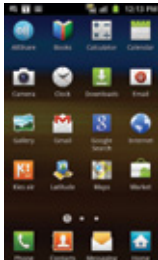

Access Recently-Used Applications

Your device keeps a running list of your six most recently used applications.

 
1. Press and hold  to open the recently-used applications window.
2. Tap an icon to open an application.

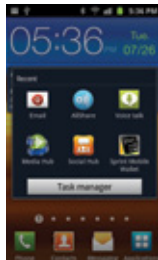


Entering Text With the Onscreen Keyboard

Your QWERTY Keyboards


There are two versions of onscreen keyboards available on your Epic™ 4G Touch: the Samsung keypad and Swype (default), which uses a unique gliding method to let you enter whole words quickly. When you select a field that requires text or numbers, an onscreen keyboard will appear so you can enter the information, or type your message. (If you don't see the keyboard when, for instance, you're entering contact information, just touch the field you're working on to bring it up.) The device's QWERTY keyboards can be used in either portrait or landscape mode.

 - To select the Swype keyboard, press  and tap **Settings > Language and keyboard > Select input Method > Swype**. (Swype is the default keyboard.)

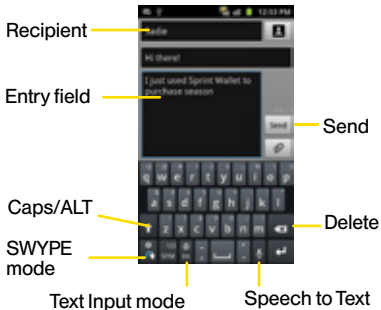


Text Entry with Your Swype Keyboard

1. Touch an onscreen character, and then, while maintaining your finger onscreen, drag to the next character in the desired word.

2. Repeat this process until the desired characters have been drawn over. Select from an onscreen list of possible word matches (if prompted). This occurs if your current swype has generated more than one possible word match. For tips on using Swype, touch  and follow the onscreen information.

Your Swype Keyboard Settings

You can customize your onscreen keyboard settings to suit your needs:

Press  and tap **Settings > Language and keyboard > Swype** to select your Swype settings:

Preferences:

- **Language** allows you to select the current text input language. Default language is US English.
- **Audio feedback** turns on/off sounds generated by the Swype application during use.
- **Vibrate on keypress** activates a vibration as you enter text.

Swype Advanced Settings:

- **Word suggestion** suggests words during typing.
- **Auto-spacing** automatically inserts spaces between words. When you finish a word, just lift your finger to start the next word.
- **Auto-capitalization** automatically capitalizes the first letter of the first word in a sentence.
- **Show complete trace** determines whether to show the entire path formed by the letters you are sliding over to form a given word.
- **Speed vs. accuracy** sets how quickly Swype responds to your onscreen input. Move the slider between **Fast Response** (speed) or **Error Tolerance** (accuracy) and touch OK.

Help:

- **Swype help** to access Swype Help information and user manual.
- **Tutorial** provides access to onscreen Swype tutorials.

About:

- **Version** displays the current software version.



Entering Text With the Onscreen Keyboard

Text Entry with the Samsung Keypad


Entering text with the onscreen Samsung QWERTY keypad is easy: just tap the letters to type the words.

1. From a screen where you can enter text, tap the input field to reveal the onscreen keyboard.
2. With the Samsung keypad as your text entry method, select one of the following text mode options:
 - **ABC** to use alphabetic characters from the onscreen keyboard.
 - **?123** to enter numbers by pressing the numbers on the onscreen keyboard.
 - **Voice Input** allows the device to use its built-in voice recognition software to hear your voice and transcript it directly into text.

3. Tap the corresponding onscreen keys to begin typing your word.

If you make a mistake, tap  to erase a single character. Touch and hold  to erase all previously entered words.

Your Samsung Keypad Settings



Press  and tap **Settings > Language and keyboard > Samsung keypad** to access the Samsung keypad settings such as:

Portrait keypad types (Qwerty keypad, 3x4 Keypad, Handwriting box 1, Handwriting Box 2)
Input languages (English, Español), **XT9**,
Keypad sweeping, **Character preview**,
Auto-capitalization, **Handwriting settings**,
Voice input, **Auto-full stop**, or **Tutorial**.

Use Your Device: Voicemail

Set Up Your Voicemail

All unanswered calls are automatically transferred to your voicemail, even if your phone is in use or turned off. You should set up your voicemail and personal greeting as soon as your phone is activated:

1. Press  and tap  > **Voicemail**.
2. Tap **Personalize now** and follow the system prompts to create your password and record your name and greeting.

Voicemail Password
(do not share): _____

Sprint strongly recommends setting a voicemail password. Without a password, anyone who has access to your phone can access your messages.

Retrieve Your Voicemail





- Press  and tap  > **Voicemail**.

From any other phone:

1. Dial your wireless phone number.
2. When your voicemail answers, press *****.
3. Enter your password.

Make and Answer Calls

Make a Phone Call

1. Press  and tap  Phone.
2. Tap the digits of the number you want to call on the Phone keypad. (The number will appear just above the keypad as you enter it. Tap  to delete one or more digits.)
3. Tap .

Answer an Incoming Call

- Drag  to the right on the screen.

Send a Call Directly to Voicemail

- Drag  to the left.




Mute the Ringer on a Call

- To mute the ringer:
 - Press the volume button.




Messaging

Send a Text Message

1. Press  and tap **Messaging** .
2. Tap **Messaging** .
3. Enter a phone number, email address, or contact name in the **Enter recipient** field. (If the device recognizes a contact, you'll see a list. Touch the contact to complete the address.)
4. Tap the **Tap to enter message** field and then type your message.
5. When you are finished, tap **Send**.



Send a Picture or Video Message (Multimedia Messaging)

1. Follow steps 1 – 4 for sending a text message.
2. Tap .
3. Tap a media type (such as Pictures, Videos, Audio, etc.) and then tap an available album.

4. Tap a picture or clip to select it. (For Audio, tap OK.)
5. If you are satisfied with your message, tap **Send**.

Note: For information on taking pictures and videos with your device, see "Camera & Camcorder" on page 20.

Access Messages

1. Press  and tap **Messaging** .
2. From the Messaging screen, tap the message you want to view.

–or–




1. Open the **Notifications** panel.
2. Tap the message you want to view.

All your text and MMS messages for a contact are collected in an ongoing “conversation,” so when you view a message, you can scroll through the entire history of your messages with that person.



Contacts

Your device's Contacts function lets you access and manage contacts from a variety of sources, including Google and Corporate email accounts, contacts synced from your computer, and old-fashioned contacts entered by hand.



Save a Phone Number

1. Press  and tap .
2. Enter a phone number using the onscreen keypad.
3. Tap **Add to Contacts > Create contact**
–or–
Press  and tap **Add to Contacts > Create contact**.
4. Tap **First name** and **Last name** fields, and enter a name for the new entry.
5. Tap **Mobile** (default) to select a label such as Mobile, Home, Work, Work Fax, Home Fax, Pager, Other, Custom, or Callback.
6. Tap **Save** to complete and save the entry.



Retrieve a Phone Number

1. Press , tap **Contacts**, and then press .
2. Enter the first letter or letters of an entry.
3. Tap the contact to display the contact's phone number(s).

Add a New Entry to Contacts

1. Press  and tap **Contacts**.
2. Tap .
3. Tap any field and use the onscreen keyboard to enter the name, phone number, and other contact details.
4. Add more data fields or a picture if desired, and tap **Save**.

Edit a Contact Entry

1. Press  and tap **Contacts** > [contact you'd like to edit].
2. Press  and tap **Edit**.
3. Tap an option:
 - [image icon] to assign a picture to the entry.
 - **First name/Last name** to edit the current name.
 - **Phone** to add or delete a phone number.
 - **Internet call** to add or delete an Internet number.
 - **Email** to add or delete an email address.
 - **IM** to add or delete instant messaging.
 - **Groups** to add or delete groups such as Starred in Android, Co-workers, Family, Friends, or My Contacts.
 - **Ringtone** to assign a ringtone.

- **Postal address** to enter a physical address for the contact. Choose from **Home**, **Work**, **Other**, or **Custom**.
- **Organization** to enter business information such as a company name.
- **More** to add additional categories such as **Notes**, **Nickname**, **Website**, **Birthday**, or **Anniversary**.



4. Tap **Save** to save your updates.



Email



Your device's Email applications let you access and manage multiple email accounts simultaneously in one convenient location. Although there is a separate Gmail application, the main email application can manage both Internet-based email services (Gmail™ and Yahoo™) and Corporate Work Email (Outlook®). The device can also be manually configured to connect to other email systems.

Set Up a Gmail Account




1. Press  and tap  > Gmail.
2. Follow the instructions to set up or sign in to a Gmail account.

Note: Although you need a Gmail account to use certain features such as Android Market, you do not have to use Gmail as the default account for your device.

Set Up a POP3/IMAP Email Account



1. Press  and tap  > Email.
2. Enter the Email address and Password for the email account.
3. Tap **Next**.
4. Tap **POP3 Account** or **IMAP Account** and follow on the onscreen instructions.

Set Up a Microsoft Exchange ActiveSync Account

1. Press  >  and tap  > Email.
2. Enter your **Email address** and **Password** for the email account.
 - Contact your Exchange Server administrator for required sign-in information.
3. Tap **Manual setup**.
4. Tap **Microsoft Exchange ActiveSync** (from the add email account screen).

5. When prompted to provide additional detailed information, scroll down the screen and tap **Next**.
6. Enter a **Domain\Username, Password,** and **Exchange Server** information.
7. Read the onscreen activation disclaimer and, if prompted, tap **Next**.
8. Configure your Email check frequency, Amount to synchronize (days to synchronize between your device and server), and activate any other email settings, and then tap **Next**.
9. Identify your new account with a unique name and provide the outgoing name text then tap **Done**.

Access Email Messages



1. Press  and tap  > Email or Gmail.
2. From the inbox, tap the message you want to view.

Send an Email Message

1. Press  and tap  > Email or Gmail.
2. Tap  or press  and tap **Compose**.
3. Enter an email address in the **To:** field.
4. Enter a subject and a message.
5. Tap **Send**.

Camera & Camcorder




Take a Picture

1. Press  and tap  > Camera .
2. Using your display as a viewfinder, aim the camera lens at your subject, and tap the onscreen camera icon.

View Pictures



1. Press  and tap  > Gallery to view the Camera folders.
2. Press and hold a picture to explore other options.

Record a Video



1. Press  and tap  > Camera to activate camera mode.
2. Select the camcorder icon to activate camcorder mode.
3. Using the device's display screen as a viewfinder, aim the lens at your subject, and tap  to begin recording.

4. Tap  to stop recording.

View videos

1. Press  and tap  > Gallery.
2. Tap a video icon to view the video.




Send or Share Pictures and Videos

1. Press  and tap  > Gallery.
2. Tap **Camera** to reveal your pictures and videos, and then press and hold a picture or video to send.
3. Tap **Send via** and select an option, such as **Bluetooth**, **Email**, **Gmail**, **Messaging**, or **Wi-fi**.
–or–
Tap **More** > **Share via** to share via **AllShare**, **Picasa**, or **YouTube**.
4. Follow the onscreen instructions to send your picture or video clip.

Web

Find sports scores, news, and weather. Shop online. On-the-go access lets you browse full-color versions of your favorite websites.

Go Online

1. Press  and tap  > **Internet**.
2. From the Sprint home page, select categories, navigate to websites, read blogs, download content, and more.
 - Tap a category to open it.
 - For more options, press  from any page. Options may include **New window, Windows, Browser brightness, Refresh, (or Stop) and Forward**. Tap **More** for additional options including **Add bookmark, Add shortcut to Home, Find on page, Page info, Share page, Downloads, Settings, and Print**.
 - To scroll, slide your finger up or down the page.
 - To zoom in or out, pinch or spread the screen.

Downloading Applications From the Web

You can download applications while browsing the Web, but you must first set permissions in settings to allow applications from unknown sources. Applications downloaded from Android Market (see page 23) do not require additional permissions.

1. Press  >  and tap **Settings** > **Applications**.
2. Select the **Unknown sources** check box.
3. When the Attention dialog box opens, read the disclaimer and tap **OK**.



***Note:** All downloaded applications are saved to your device's microSD storage card. Your device came with a pre-installed microSD card. For information on installing a new card, please see the User Guide at sprint.com/support.*

Sprint 4G

Take Advantage of 4G Speed

Sprint 4G data services give you the speed you need to watch and upload high resolution streaming videos, browse the Web, and have real-time video chats with your friends.

For information about the availability of Sprint 4G in your location, visit sprint.com/coverage.



1. To activate Sprint 4G, press  >  and tap **Settings > Wireless and networks**.
2. Tap **4G settings** and tap the **4G** check box to turn Sprint 4G on.
 - When you're connected to the 4G network, you'll see the 4G icon in the status bar.

***Note:** When you're not in a Sprint 4G services area, clear the 4G check box in the Wireless & networks settings page to extend battery life.*

Wi-Fi

Connect to a Wi-Fi Network

When you're in range of an available Wi-Fi network you can use your device's Wi-Fi feature to access the Internet and other data services.




1. Press  >  and tap **Settings > Wireless and networks**.
2. Tap **Wi-Fi settings** and tap the **Wi-Fi** check box to turn Wi-Fi on.
3. Tap **Add Wi-Fi network** to display a list of available networks.
4. Tap a Wi-Fi network to connect. If necessary, enter the security key and tap **Connect**.
 - When you're connected to a Wi-Fi network, you'll see the Wi-Fi icon in the status bar.

***Note:** When you're not using Wi-Fi, clear the Wi-Fi check box in the Wireless & networks settings page to extend battery life.*

Android Market

Android Market™ gives you access to thousands applications to boost your productivity and increase your fun.

Download Applications and Games

1. Press  and tap  > **Market**.
2. The first time you visit Android Market, tap **Accept** to accept the Terms of Service.
3. If not already logged in with your Google account, tap **Next**.
4. Tap **Sign in** and enter your Google account information.
5. To find what you want quickly:
 - Browse through featured apps and games. Scroll through the options or browse by categories within **Apps**, **Games**, **Books**, or **Movies**.
 - Search for an app or game. Tap **Search** on the Android Market home screen, enter the name or key word, and then tap  to the right of the search box.

6. Tap an app or game to read a description and user reviews.
7. Tap **Install** (for free applications) or **Buy** (for paid applications).







Note: You must have a Google (Gmail) account set up on your device to purchase and download applications from Android Market.

Opening Installed Applications and Games

- Press  and tap . Locate the downloaded item and tap it to launch. You can also launch from the **Market** >  > **My apps** screen.

Google™ Mobile Services


Your Samsung Epic™ 4G Touch provides easy access to a variety of Google services including Gmail™, Google Talk™, Google Maps™, Google Navigation, and YouTube™.

- **Gmail** – The Google mail service. Your Gmail account lets you access many Google-related services as well as the Android Market. (See “Set Up a Gmail Account” on page 18.)
- **Google Talk** – Google’s instant messaging service. Press  and tap  > **Talk** to begin using the service. (If you’re signed in to your Gmail account, you are already signed in to Google Talk.)
- **Google Maps and Google Navigation** – The Google location programs let you track your current location, view real-time traffic situations, and receive detailed directions to your destination. They also provide search tools where you can locate places of interest or an address on a vector or aerial map, or view locations in street level. Press  and tap  > **Maps** or **Navigation** to begin using the services.
- **YouTube** – View and share videos on one of the Web’s most popular video sites. Press  and tap  > **YouTube** to browse through and view available videos. Sign in with your Gmail account to upload your own videos.




Your Epic™ 4G Touch lets you use the Qik Video by Sprint application to share live videos and have live mobile video chats with compatible mobile devices.

Set Up a Qik Account

Before using Qik Video on your device, you must create a Qik account, and sign in on your device.



1. Download and install **Qik Video for Sprint** from the Android Market.
2. Press  and tap  > **Qik Video**.
3. Tap **Sign up** and follow the instructions to download, install, and set up an account.

Qik Overview

1. Press  and tap  > **Qik Video**.
2. Tap **Log in** to sign in to your Qik account.
3. Press  and tap **Settings** to set your preferences, including sharing preferences, location settings, or video quality.



4. Select from the main Qik options: **Video Chat**, **Record & Share**, **Video Mail**, or **Video Gallery**.

Live Mobile Video Chat With Qik



1. Press  and tap  > **Qik Video**.
2. Tap **Video Chat**.
3. Select a contact.
 - To complete a video chat, the contact must have a compatible wireless device and a Qik account.
4. Speak directly to your chat partner. Using the front-facing camera, you will see your image in one corner and the other party's image will cover the rest of the screen.

Bluetooth




Pair and Connect With a Bluetooth®-Capable Device

1. Verify your Bluetooth is active. (Press  >  and tap **Settings** > **Wireless and networks** > **Bluetooth settings** > **Bluetooth** to turn on Bluetooth. A green checkmark will appear.)
2. From the Bluetooth settings page, tap **Visible**. Your device must be visible to successfully pair with an external device.
3. Tap **Search for devices**. (Your device will display a list of discovered in-range Bluetooth devices.)
4. Tap a device from the list to initiate pairing.
5. Enter the passkey or PIN code and tap **OK**.
6. The external device will then have to also accept the connection and enter your device's PIN code.
7. Once you're paired with a device, your connection should launch.

Share Contacts, Files, or Pictures Using Bluetooth

1. Open the application containing the file you want to share (for example, press  and tap **Contacts**).
2. Locate the file or entry you want to share.
 - You can send pictures and videos directly from the camera or from Gallery, Calendar events, Contacts, music tracks, and voice recordings. Not all devices will be able to receive all file types.
3. Depending on the application, tap  > **Bluetooth** or press and hold the file and select **Share** (or **Send**) > **Bluetooth**.
4. Tap the name of the device to which you're sending the file. (If prompted, tap **Yes** to turn Bluetooth on.)

Open Your Music Player

- Press  and tap  > Music.
 - Music is stored by **All, Playlists, Albums,** and **Artists**. Tap a category, and then tap the song or playlist you want to play.
 - Press  for more options.

Getting Music

Before you can listen to your music, you need to load songs into the Music folder. Music can be stored in the device's internal memory or on the microSD card.

1. Use the supplied USB cable to connect your device to an available USB port on your computer. You will see the USB connected icon in the Notifications panel.



2. On your computer, locate the new removable disk (SPH-D710), open it, and open or create a Music folder.
3. Copy music files from your computer to the music folder, follow the procedures to safely remove the drive, and then disconnect the device from the USB cable.

Sprint Applications

Access additional exclusive Sprint features right from your phone.




Sprint Zone

Enhance your Sprint experience. The free Sprint Zone application makes it a snap to manage your account, get tips and tricks for your device, find recommended apps, and more.

1. Press  and tap  > **Sprint Zone**.
2. From the Sprint Zone Web page, scroll up or down and tap an item to check your account, read the latest news about your device, load an application, and more.



Sprint Music Plus

In addition to the Music application, your phone offers Sprint Music Plus, an all-in-one music store and player for full songs, ringtones, and ringback tones.

1. Press  and tap  > **Sprint Music Plus**.
2. Follow the onscreen prompts to download and install Sprint Music Plus.
 - Tap **My Library** to access all your music, including items you have purchased or loaded onto your phone's microSD card.
 - Tap **Downloads** to access your list of downloaded music.
 - Tap **Music Store** to access the music store, where you can search for, sample, and purchase DRM-free music. Tap **Ringtone Store** or **Ringback Tone Store** to find and purchase new ringtones and ringback tones for your phone.
 - For more information, press  and tap **More > Help & About**.

Sprint Hotspot

Set Up Your Sprint Hotspot

1. Press  and tap  > **Sprint Hotspot**.
2. Tap **OK** on the introduction screen.
3. Tap **Sprint Hotspot** to activate the hotspot.

Connect to the Sprint Hotspot



1. Activate Wi-Fi on the other device.
2. Scan for Wi-Fi networks from the device and select your Epic™ 4G Touch hotspot from the network list.
 - The default name for your Epic™ 4G Touch hotspot is **SPH-D710XXX**. You can change the name by tapping **Sprint Hotspot Settings** > **Router name** from the Sprint Hotspot screen.

3. Connect by entering the key that appears on the Sprint Hotspot screen.
4. When “Connected” appears on your device, launch your Web browser to confirm you have an Internet connection.

Sprint Applications



Sprint Radio

Listen to streaming music through your phone's Sprint Radio application.

- Press  and tap  > **Sprint Radio**. Follow the onscreen instructions to download and install the application.
 - Tap **Sprint Radio > Go** to browse by genre, region, or features. Sprint Radio Extra (available by subscription) offers additional features, music videos, and more.

NASCAR Sprint Cup Mobile



Keep up to date with your favorite drivers and all the news and live feeds from the world of NASCAR.

1. Press  and tap  > **NASCAR**. Follow the onscreen instructions to download and install the application.
2. Select a favorite driver to get started.

*Tip: For additional Sprint applications and features, on the Android Market home page, select **Apps > Sprint**.*

Sprint TV and Movies



Live TV and video on demand. Complete episodes and clips of your favorite primetime shows and movies. Over 50 channels of news, entertainment, weather, sports, and streaming music.

1. Press  and tap  > **Sprint TV & Movies**.
2. In the top bar, touch **Home, Live TV, On Demand, Movies, or Shop** to find what you want to watch.
 - For quick access, touch a featured item in the center of the screen or select a live option in the bottom bar.


Visit sprintchannels.mobitv.com for more information on channels and pricing.

GPS Navigation

TeleNav™ GPS Navigator lets you see and hear turn-by-turn directions to a known address, or find nearby restaurants, stores, banks, or gas stations. Get information about traffic and alternate routes.

1. Press  and tap  > **TeleNav GPS Navigator**.
2. Follow the onscreen instructions to access, launch, and use.



***Note:** Before using any navigation programs, make sure your device is set to allow location detection, and then select which sources you want to use.*

*Press  and tap **Settings > Location and security**. Select **Use wireless networks** and/or **Use GPS satellites** for location sources.*

Tools & Resources: Settings

Explore ways to customize your device, set permissions, update your phone, and more in the **Settings** menu.

Accessing Settings

1. Press  and tap  > **Settings**.

– or –

Press  >  and tap **Settings**.

2. Select the settings category you want to change. To select or clear check boxes (a common setting method), tap the check box.



Categories include:

- Wireless and networks
- Call settings
- Sound
- Display
- Power saving mode
- Location and security

- Applications
- Accounts and sync
- Motion settings
- Privacy
- Storage
- Language and keyboard
- Voice input and output
- Accessibility
- Dock settings
- Date and time
- About phone

For detailed information about settings, please see the User Guide at sprint.com/support.





Manage the Display Brightness and Screen On-Time

1. Press  >  and tap **Settings > Display > Brightness** to modify the backlight setting as desired.
2. To turn off the screen, press the Power button. The device will continue to function.
— or —

Add a Power savings widget to your Home screen. (See “Customize Your Home Screen” on page 7 in this guide for more information about adding widgets.)

Manage Your Device's Wireless Functions

Disable the Sprint Mobile Hotspot, Wi-Fi, Bluetooth, and GPS functions of the device when you're not using them.

- Press  >  and tap **Settings > Wireless and networks** and disable any of these functions that are not in use.
— or —
- Press  >  and tap **Settings > Locations and security** and disable any My Location options that are not in use.
— or —
- Add a Bluetooth, GPS, and Wi-Fi widget to your Home screen. (See “Customize Your Home Screen” on page 7 in this guide for more information about adding widgets.)












For more useful tips about battery care and safety, see the *User Guide* at sprint.com/support.




Manage Your Account

Online: www.sprint.com

- make a payment, see your bills, enroll in online billing
- check minute usage and account balance
- see or modify the details of your Sprint service plan
- get detailed instructions and download content

From Your Sprint Phone

- Press    to check minute usage and account balance.
- Press    to make a payment.
- Press    or press  and tap  > Sprint Zone to access account services, Sprint news, phone information, suggested applications, and more.

- Press    to add a new line of service, upgrade your device, purchase accessories, or access other account services.

From Any Other Phone

- Sprint Customer Service:
Dial 1-888-211-4727
- Business Customer Service:
Dial 1-888-788-4727

Helpful Sprint Information

Total Equipment Protection

The protection you need so you can be worry free

Should anything happen to your phone, you'll have a worry-free way to ensure that you get connected again soon.

- **Coverage includes:**

Loss, theft, routine maintenance, physical or liquid damage, mechanical or electrical problems, failure from normal wear and tear.

- **For more information:**



See the Total Equipment Protection brochure available at any participating retail location or go to sprint.com/tep for more details. To enroll within 30 days of activation, call **1-800-584-3666**.

Total Equipment Protection is a service provided by Asurion Protection Services, LLC, Continental Casualty Company's (a CNA company) licensed agent for the customers of Sprint.

Sprint 411

Dial 411 for nationwide listings, movie show times, restaurant reservations, driving directions and more. Spanish-speaking operators are available. See sprint.com for pricing and details.

Resources For Your Phone

- This *Get Started Guide* to get you up and running.
- **Web** – Visit sprint.com/support for the complete User Guide, along with videos, tutorials, and community forums for your Epic™ 4G Touch.
- **Sprint Zone** – Press  and tap  > **Sprint Zone** to access account services, Sprint news, phone information, suggested applications, and more.

For the Environment

At Sprint, environmental responsibility is more than talk. We're continuously working to reduce our carbon footprint and decrease our use of natural resources. To find out more, visit sprint.com/responsibility.

By registering your Galaxy S II device at www.samsung.com, you are entitled to:

- Premium service through your choice of live chat, email and/or phone
- Access to specialized call center staff to help you get the most from your purchase, including available software, how-to guides and product tips and tricks.
- Extended call center hours
- Galaxy S II product user manual

As an owner, you can write a product review, shop for accessories and receive exclusive Samsung offers.

Samsung
GALAXY S™ II

SAMSUNG
mob!le

Drive Responsibly

Be a hero. Don't drive distracted.



Focus on driving

sprint.com/focusondriving

Survey

We are interested in your initial impressions of this new Sprint phone.

Within two weeks of your phone purchase, please go to the website <http://labs.sprint.com/sprintphonesurvey> to complete a brief survey. Your feedback will help us provide the wireless features and services you want most.

Thank you for choosing Sprint.

Index

Symbols

4G 22

A

Activate 2

Android Market 23

Applications 9, 21

B

Battery 1

Battery Saving Tips 30

Bluetooth 26

Buttons 8

C

Camera 20

Contacts 16-17

E

Email 18-19

G

Games 23

Gestures 4-5

Gmail 18

Google Applications 24

H

Home Screen 6-7

I

Internet 21

K

Keyboard 10-12

Keys 8

M

Making a Phone Call 13

Microsoft Exchange
ActiveSync 18

Mute 14

Messages 15

N

Navigation 28

P

Phone Call 14

Phone Number 16

Q

Qik 25

QWERTY Keyboard 10

R

Resources 33

Ringtones 28

S

Settings 29

Screen 1

Shortcuts 7

Sprint 4G 22

Sprint Customer Service 32

Sprint ID 3

Sprint Mobile Hotspot 27

Sprint Zone 28, 31

Status Bar 6

Swype 5, 10-11

T

Total Equipment Protection 32

U

Unlock Screen 1

V

Videos 20

Voicemail 13

W

Wallpaper 7

Web 21

Widgets 7


Wi-Fi 22

Y

YouTube 24

The services described in this guide may require a subscription to a service plan and/or may incur additional charges. Not all services will work on all devices. Sprint 4G coverage is not available in all markets. See sprint.com/coverage for more details.

Portions of this guide are reproductions of work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.

Important Privacy Message. This device is capable of determining its/your geographical location. To set controls for access and use of your location information by others, press  and tap **Settings > Location and security**. Select **Use wireless networks** and/or **Use GPS satellites** for location sources. Follow any applicable prompts. These settings for the use of location information can be turned on and off. For some applications and services you select, a device must be turned on and set to allow collection of location information in order to function.

Please be advised that if you use a third party application, the application may collect your personal information or require Sprint to disclose your customer information, including location information (when applicable), to the application provider or some other third party. Sprint's policies do not apply to these third party applications. Please carefully review the application's terms of use and/or the application provider's policies for more information about how the application will collect, access, use or disclose your information before using a third-party application. Terms of use and other policies usually are available on the application provider's website.

©2011 Sprint. SPRINT and the logo are trademarks of Sprint. Other marks are property of their respective owners. Samsung, Galaxy S, and Epic are all trademarks of Samsung Electronics America, Inc. and/or its related entities. Other marks are property of their respective owners. Screen images simulated.

Printed in Korea

GH68-35312A