



*Get started* \_

*All you need to know to get going.*



Seek™



Welcome! \_

 


Your Phone \_



*Sprint is committed to developing technologies that give you the ability to get what you want when you want it, faster than ever before. This booklet introduces you to the basics of getting started with Sprint and your new Samsung Seek.™*

**Only on the Now Network.™**

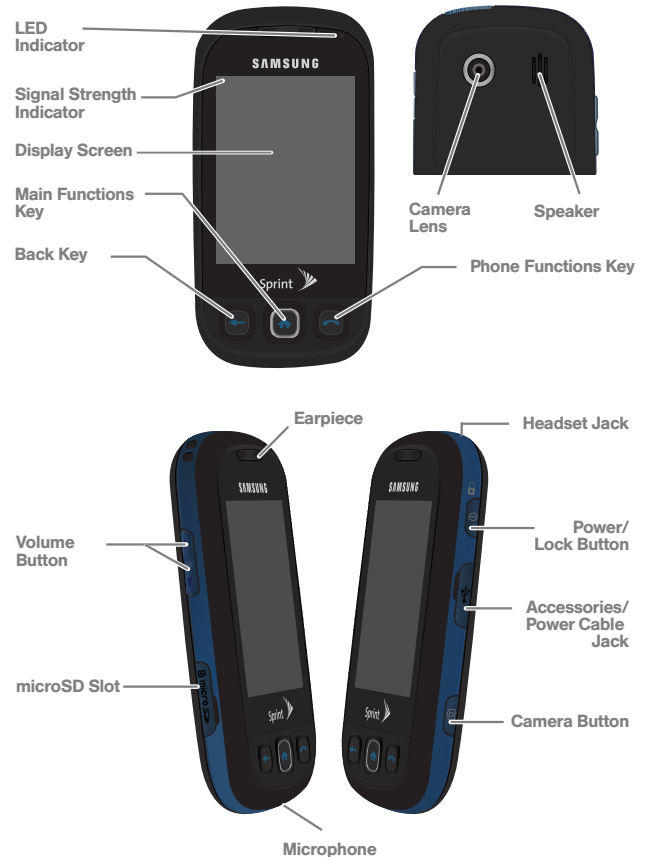

## Get Your Phone Ready \_



### ▶ Insert the Battery

1. Remove the battery cover from the back of the phone by pressing down with your thumbs (A). Slide the cover towards the camera lens to release the cover (B).
2. Insert the battery into the battery compartment (C) and gently press down until it clicks into place (D). Then replace the battery cover.



### ▶ Charge the Battery

1. Plug the charger into an outlet.
2. Plug the other end of the charger into the phone's Accessories/Power Cable Jack.

### ▶ Set the Backlight

 
Select how long the display screen remains backlit.

1. Press > **Main** > **Settings** > **Display** > **Dim**.
2. Touch a time setting.

**Note:** Long backlight settings reduce the battery's talk and standby times.

### ▶ Turn the Phone On

- Press and hold to turn the phone on.
- Press to turn off the display and then press again to display the unlock screen.
- If you need to turn the phone off, press and hold .

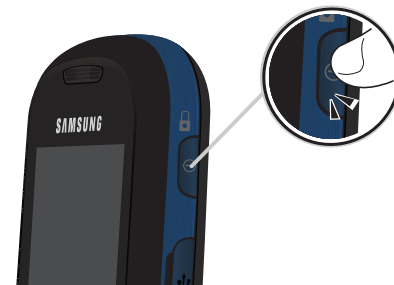

## Activate Your Phone \_





### ▶ Activate Your Phone

- If you purchased your phone at a Sprint Store, it is probably activated and ready to use.
- If you received your phone in the mail, and it is a new Sprint account or a new phone number, your phone is designed to activate automatically when you first turn it on. To confirm your activation, make a phone call.
- If you received your phone in the mail and it is going to be activated on an existing number (you're swapping phones), go to [sprint.com/activate](http://sprint.com/activate) and follow the instructions.


When you have finished, make a phone call to confirm your activation. If your phone is still not activated or you do not have access to the Internet, contact Sprint Customer Service at **1-888-211-4727** for assistance.

### ▶ Switch to Spanish Menus (optional)

1. Press  > **Main**  > **Settings** > **General** > **Language**.
2. Touch **Español**.

## Get to Know Your Phone \_

### ▶ Navigating on Your Phone



 
 

- **Touch.** Touch and gently press icons on the screen to open menu items. (The smaller the contact point on the screen, the less pressure required. Use your fingertip rather than the pad of your finger.)
- **Scroll.** *Firmly* press and slide your finger up or down the screen to scroll through lists of menu items. (Scrolling on your Seek requires that you press more firmly on the screen than the gentle press required to open menu items.)
- **Go back.** Press  to go back to the previous menu and to delete text you have entered on the screen.






## ▶ Phone Functions Menu

Press  to access the following:


 


-  **Speed Dial.** Stores up to 8 numbers to make contacting friends and family as easy as touching the screen.
-  **Contacts.** Stores up to 600 Contacts entries.
-  **Recent.** Lists up to 240 phone numbers or Contacts entries for calls you placed, accepted, or missed.
-  **Dialer.** To place a call, simply enter a phone number using the onscreen dial pad and touch  (where the phone number appears) to place a call.


**Note:** Speed Dial is the default screen that appears when you touch  from a Main Functions menu screen.



## ▶ Main Functions Menu

Press  to access the following:

-  **Favs.** Assign shortcuts to up to 8 of your favorite or often-used functions.
-  **Main.** Access all of the tools and functions you use everyday.
-  **Fun.** You'll find music, My Photos, social networking apps, and other fun features.
-  **Web.** Surf the Internet, and find easy access to weather, news, sports and movies.

**Note:** Favorites is the default screen that appears when you touch  from a Phone Functions menu screen.



## Making and Answering Calls \_

 


### ▶ Make Your First Phone Call

1. Press
2. Touch **Dialer** and use the onscreen dial pad to enter a phone number.
3. Touch where the phone number you entered is displayed to place the call.
4. To end a call, in a single motion press *and slide* to the right.

### ▶ Answer Your First Call

- If your screen is active, touch to answer an incoming call. (Slide your finger across the **Ignore** bar to send the call to your voicemail box, or **Ignore with Text** to send the call to your voicemail box and send the caller a text message.)
- If your screen is locked, it will illuminate and indicate the Caller ID information on a virtual card. To answer the call, touch and slide the **Answer** icon. To ignore the call, touch and slide your finger across the **Ignore** or **Ignore with Text** field.

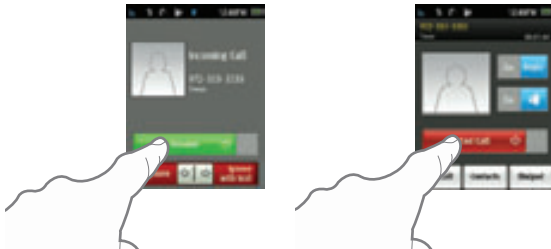

## Voicemail \_



### ▶ Set Up Your Voicemail

All unanswered calls are automatically transferred to your voicemail, even if your phone is in use or turned off. You should set up your voicemail and personal greeting as soon as your phone is activated:

1. Press and touch **Dialer** .
2. Press and hold and follow the system prompts to create your passcode and record your name and greeting.

**Voicemail Passcode**  
(do not share): \_\_\_\_\_

Sprint strongly recommends setting a voicemail passcode. Without a passcode, anyone who has access to your phone can access your messages and place outbound calls through your wireless account.

### ▶ Retrieve Your Voicemail

From your phone:

- Using One Touch Message Access, press > **Dialer** and press and hold .



From any other phone:

1. Dial your wireless phone number.
2. When your voicemail answers, press \*.
3. Enter your passcode.


 


## Pictures \_



### ▶ Take a Picture

1. Press and release  on the side of your phone to activate camera mode.
2. Using the phone's display screen as a viewfinder, aim the camera lens at your subject.
3. Press  until the shutter sounds. (The picture will automatically be saved into your phone's internal memory.)







### ▶ Send a Picture

1. Press  and touch **Main**  > **Messaging** .
2. Touch  to compose a new picture message.
3. Select a contact entry method (**Recent List**, **Contacts**, **Manual Entry**).
4. Touch **Options** > **Picture** > **My Photos** to select a picture or **Take New Picture** to attach a new picture.
5. Touch one or more thumbnail images and then touch **Ok**.
6. Type a message and touch **Send**.

## Messaging \_



### ▶ Send Text Messages

1. Press  and touch **Main**  > **Messaging** . The **Text** screen appears by default.
2. Touch  to compose a new text message. Use the keyboard to enter a recipient by choosing **Recent List**, **Contacts** or **Manual Entry**.
3. Type the message and touch **Send** to send the text message. (To delete text, touch . Hold down  to delete the entire message.)



## Contacts \_



### ▶ Add a New Contact

1. Press and touch **Contacts** .
2. Touch .
3. Touch **Enter Name** and use the keyboard to enter the name.
4. Touch **Add Number** and use the keypad to enter a phone number.
5. Touch the white area to the left of the number and select **Mobile, Home, Work, Pager, or Others**.
6. Scroll up and down the screen and touch any of the remaining fields to enter additional information.
7. Touch **Done** to save the entry.

### ▶ Find a Contact to Make a Call

1. Press and touch **Contacts** .
2. Scroll down through the list by sliding your finger up or down through the Contacts entries.
3. Touch the entry to display the contact's phone number(s). To dial, touch the number you would like to call.

## Favorites \_



Your phone offers you the option of assigning shortcuts for quick and easy access to your favorite or often-used functions.

### ▶ Add an Application as a Favorite Function

1. Press . **Favs** appears as the default screen.
2. Touch .
3. Touch **Applications** and choose from one of the following category types: **Main, Fun, or Web**.
4. Touch a function to add it to the Favorites page.
5. Repeat this process to add other functions such as **Media Playlist, Send Message/Email, or Web Bookmarks**.

## Helpful Sprint Information \_

### ▶ Total Equipment Protection

*The protection you need so you can be worry free*

Should anything happen to your phone, you'll have a worry-free way to ensure that you get connected again soon.

#### • Coverage includes:

Loss, theft, routine maintenance, physical or liquid damage, mechanical or electrical problems, failure from normal wear and tear.

#### • For more information:

See the Total Equipment Protection brochure available at any participating retail location or go to [sprint.com/tep](http://sprint.com/tep) for more details. To enroll within 30 days of activation, call **1-800-584-3666**.

Total Equipment Protection is a service provided by Asurion Protection Services, LLC, Continental Casualty Company's (a CNA company) licensed agent for the customers of Sprint.

### ▶ Sprint 411

Dial 411 for nationwide listings, movie show times, restaurant reservations, driving directions and more. Spanish-speaking operators are available. See [sprint.com](http://sprint.com) for pricing and more details.

## Manage Your Account \_















### ▶ Online: [www.sprint.com](http://www.sprint.com)

- make a payment, see your bills, enroll in online billing
- check minute usage and account balance
- see or modify the details of your Sprint service plan
- get detailed instructions and download content

### ▶ From Your Sprint Phone

Press  and touch **Dialer** .

- Press    **4** to check minute usage and account balance
- Press    **3** to make a payment
- Press    **2** to access a summary of your Sprint service plan or get answers to other questions
- Press    **7** to add a new line of service, upgrade your phone, purchase accessories, or access other account services

### ▶ From Any Other Phone

- Sprint Customer Service: Dial **1-888-211-4727**
- Business Customer Service: Dial **1-800-927-2199**

## Resources \_



### ▶ For Your Phone

- This *Get Started Guide* to get you up and running.
- **Basics Guide** – Details about using your phone.
- **Web** – Go to [sprint.com/support](http://sprint.com/support) to download the latest version of the *User Guide*, and to access troubleshooting and other resources.

### ▶ For the Environment

Recycle your old phone safely and conveniently using the addressed recycling envelope packaged with your new phone. Visit [sprint.com/recycle](http://sprint.com/recycle) for more details.

## [sprint.com/begin](http://sprint.com/begin) \_

- ▶ Visit [sprint.com/begin](http://sprint.com/begin) to discover all you can do with your phone and Sprint service. Explore all your options, find ways to personalize your experience, even vote for your favorite features. It's a whole new beginning.