



>> | **Quick Start Guide** **for the AirCard® 59x PC Card**

This document describes how to install and use the Sprint Mobile Broadband Card on a PowerBook® G4 computer.

If you require technical support, please contact Sierra Wireless.

To use your Sprint Mobile Broadband Card, you'll need:

- If your card has not been activated: a Windows-based PC, to activate your card **before** you use it in your PowerBook G4 computer (described below).
- A PowerBook G4 computer with a PC Card (PCMCIA card) slot, running Mac OS X version 10.4 or newer. To check your version, from the Apple menu (🍏) choose **About This Mac**. If your version is earlier, then visit www.apple.com/downloads/macosx/apple for upgrading instructions, or, in Finder™, choose **Go > Applications > System Preferences**. Double-click the System Preferences icon, then double-click **Software Update**. Click **Check Now**.

If your card is activated, proceed to "Installing your Sprint Mobile Broadband Card on your G4".

If your card is not activated

You will need a telephone, and a Windows-based PC with a PC Card slot, running Windows 2000 (with Service Pack 1 or later) or Windows XP.

1. Write down your card's ESN (the 11-digit number on the back of your card).

2. Install the Sprint PCS Connection ManagerSM software on the Windows PC. (If you're using Windows 2000, you must log in with administrative privileges.)

- a) Insert the CD into the Windows PC.
- b) If the CD does not autostart, select **Start > Run > d:\SCMInstaller.exe** (where **d** is your CD-ROM drive letter).
- c) Follow the instructions displayed on the screen. When prompted, insert the card.

Warning! When inserting or removing your card, always grip it by its sides. Gripping the card by its antenna may damage the card.

After Windows installs the drivers for the card, the Activation Wizard should start automatically.

3. Ensure you have the items listed on the screen, and call the phone number listed.
4. Follow the instructions of the Sprint Customer Service specialist to activate your card. Write down this information:

My Sprint PCS Phone number:

My MSID: _____

My account password: _____

My Sprint PCS User Name: _____


After Sprint sets up your account on the network, your card is activated and ready for use on your G4 computer. See "Installing your Sprint Mobile Broadband Card on your G4" below.

Installing your Sprint Mobile Broadband Card on your G4


1. From the Sierra Wireless web site (www.sierrawireless.com), download the Sierra Wireless Watcher™ Lite Installer program to your PowerBook G4 computer.
2. Run the program.
3. In Finder, choose **Go > Applications > Sierra Wireless Watcher**.
4. Hold the card by its sides and insert it into your PowerBook G4 computer.

Warning! When inserting or removing your card, always grip it by its sides. Gripping the card by its antenna may damage the card.

Watcher Lite should start automatically:

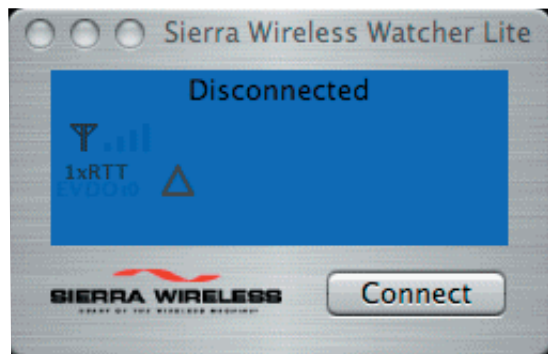

5. If the New Port Detected window appears, click **Continue**.

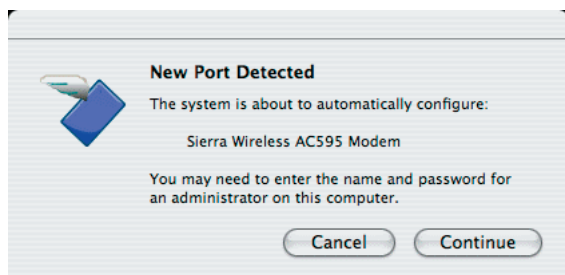

6. If the Authenticate window appears, enter your user-name and password, then click **OK**.

Connecting to the Sprint network

To connect to the Nationwide Sprint PCS Network:

1. In Watcher Lite, click **Connect**.

Once you're connected to the network, Watcher Lite shows the amount of time you've been connected, and the amount of data received (Rx) and transmitted (Tx).

To end your network connection:

1. In Watcher Lite, click **Disconnect**.

Icons and text in Watcher Lite

Icon/text	Description
	CDMA network signal strength, indicated by the number of bars.
1xRTT EVDO r0	You are not in coverage.
1xRTT EVDO r0	You are in 1X and 1xEV- DO Rev. 0 coverage.
1xRTT EVDO rA	You are in 1X and 1xEV- DO Rev. A coverage.
1xRTT EVDO r0	You are in 1X coverage.
1xRTT EVDO r0	You are in 1xEV- DO Rev. 0 coverage.
1xRTT EVDO rA	You are in 1xEV- DO Rev. A coverage.
	You are roaming. Roaming charges may apply.
	You are not roaming.
Disconnected	Ready to connect to the network. To connect, in Watcher Lite click Connect .
Connected	Connected to the network.
No device detected	Ensure the card is properly inserted into your computer.
Not activated	See "If your card is not activated" on the first page.
Rx	Amount of data received from the network.
Tx	Amount of data transmitted to the network.

Menu options

From the Extras item on the Sierra Wireless Watcher menu, you can:

- Turn the card off (for example, when you're in an aircraft)
- View information about the card
- View, configure, and use the data and VPN connections available on your computer (for example, WWAN, WiFi, Bluetooth, VPN)

Removing your card

To remove the Sprint Mobile Broadband Card from your Mac:

1. End your network connection, as described above.
2. Using your computer's PC Card (PCMCIA card) ejector, eject the Sprint Mobile Broadband Card from the PC Card slot.

Warning! When inserting or removing your card, always grip it by its sides. Gripping the card by its antenna may damage the card.

Care and maintenance

As with any electronic device, the Sprint Mobile Broadband Card must be handled with care to ensure reliable operation.

Follow these guidelines in using and storing the card:

- Do not apply adhesive labels to the card.
- The card should fit easily into the PC Card slot. Forcing the card into the slot may damage connector pins.
- Protect the card from liquids, dust, and excessive heat.
- When the card is not connected to your computer, store the card in a safe place (for example, in the plastic case provided with your card).

©2006 Sierra Wireless. All rights reserved.
The Sierra Wireless logo, Heart of the Wireless Machine, and AirCard are registered trademarks of Sierra Wireless. Watcher is a trademark of Sierra Wireless.
The Mac logo, Mac OS, PowerBook, and Finder are trademarks of Apple Computer, Inc.
Other logos, company or product names that appear in this document may be trademarks of their respective owners. All product specifications are subject to change without notice.
2130766 Rev 1.0