



Get started.

All you need to know to get going.

 **LG** LX370



Get Your Phone Ready

Welcome

Sprint is committed to developing technologies that give you the ability to get what you want when you want it, faster than ever before. This booklet introduces you to the basics of getting started with Sprint and your new LG LX370.

Only on the Now Network™.



> Insert the Battery

1. Remove the battery compartment cover. Use your thumbs to press down on the battery compartment and slide the cover downward.
2. Align the battery contacts with the contacts in the compartment, and then gently press the battery down until it clicks into place.
3. Slide the battery cover back into place.




> Charge the Battery

1. Plug the phone charger into an outlet.
2. Plug the other end of the charger into the micro-USB connector located on the lower left side of the phone.

> Turn the Phone On

- Press and hold  to turn the phone on.

> Switch to Spanish Menus (optional)

1. Highlight  and press  > **Settings** > **Display** > **Language**.
2. Highlight **Español** and press .

Activate Your Phone




> **Activate Your Phone**

- If you purchased your phone at a Sprint Store, it is probably activated and ready to use.
- If you received your phone in the mail, and it is a new Sprint account or a new phone number, your phone is designed to activate automatically when you first turn it on. To confirm your activation, make phone call.
- If you received your phone in the mail and you are switching numbers from a previous Sprint phone or the new phone, you need to go online to activate the number on your new phone.
 - From your computer's Web browser, go to sprint.com/activate and complete the onscreen instructions to activate your phone.

When you have finished, make a phone call to confirm your activation. If your phone is still not activated or you do not have access to the Internet, contact Sprint Customer Service at 1-888-211-4727 for assistance.

Make Your First Call






> **Make Your First Phone Call**


1. Enter a phone number using your keypad. (If you make a mistake while dialing, press  to erase.)
2. Press .
3. When you're finished, press  or close the phone.

Navigate Your Phone

> Introducing Sprint One Click



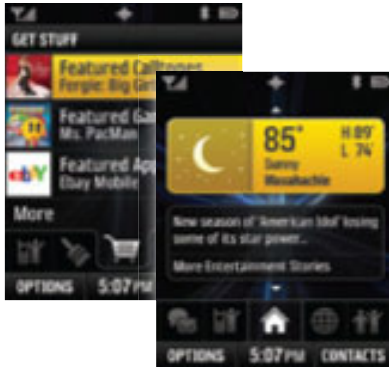

Sprint One Click brings all your favorite features to your fingertips on your LG LX370.

This easy-to-use design lets you access features such as **Messaging** , **GPS Navigation** , **Google** , and the **Internet**  all without having to leave the main screen. It also gives you at-a-glance access to personalized information “bubbles” when you’re on the **Home**  screen.



> Get to Know the Main Screen











- **Carousel** – The bottom row of **tiles**, or icons, on your main screen. The carousel gives you instant access to your favorite features.
To highlight a tile, press the navigation key right or left to move the carousel. The center tile is the highlighted tile. (The **Home** tile  is highlighted in the illustration above, displaying the Home screen.)
To highlight an option above a tile, press the navigation key up or down to select it.
- **Bubbles** – The “at-a-glance” information windows available when the Home  screen is displayed.
To access the phone’s main menu, highlight  and press .

Navigate Your Phone

> Personalize Your Home Screen

Add up to eight “bubbles” to your Home screen to display the information you want at a glance.


1. Highlight  and press **OPTIONS** (left softkey) > **Personalize Home Screen > Add a Bubble**.
2. Highlight a bubble (such as Date and Time , News , Weather , Sports News , Finance , or Horoscope ) and press **ADD** (left softkey). Follow the instructions to customize your selection.

 - To use the bubbles, press the navigation key up or down to highlight a bubble, and then press  to display more information.

> Personalize Your Carousel

Your phone’s carousel holds up to 15 tiles. Add, remove, and rearrange tiles as often as you like. For more information, see **Section 2B: Navigating the Main Screen** in your *User Guide*.

> Learn More

Use the built-in Tutorial to learn all you need to know about Sprint One Click. Highlight  and press **OPTIONS** (left softkey) > **Tutorial**.

Voicemail


> Set Up Your Voicemail

All unanswered calls are automatically transferred to your voicemail, even if your phone is in use or turned off. You should set up your voicemail and personal greeting as soon as your phone is activated:

1. Press and hold **1**.
2. Follow the system prompts to create your passcode and record your name and greeting.

> Retrieve Your Voicemail

From your phone:

1. Using One Touch Message Access, press and hold **1**.
2. Otherwise, use the menu keys to select  > **Messages > Voicemail > Call Voicemail**.

From any other phone:





1. Dial your wireless phone number.
2. When your voicemail answers, press *****.
3. Enter your passcode.

Contacts

> Save a Phone Number

1. Enter a phone number and press **OPTIONS** (right softkey) > **Save**.
2. Select **New Entry** to create a new contact, or **Existing Entry** to save the number to an existing contact.
3. Select a category for the number (such as **Mobile**, **Home**, **Work**, **Pager**, **Fax**, or **Other**), enter a name for the entry, and add any other information you wish to store to the contact.
4. Press **DONE** (left softkey).






> Retrieve a Phone Number

1. Highlight  and press  > **Contacts**.
2. Use your navigation key to scroll through the entries, or use your keypad to enter the first few letters of the contact entry.
3. To display an entry, highlight it and press .
4. To call the entry's default phone number, highlight it and press .





Note: You can also display the Contacts list by pressing **CONTACTS** (right softkey) in standby mode.

Pictures & Video



> Take a Picture

1. Highlight  and press  > **Photos** > **Camera** to activate the phone's camera. (You can also press the Camera button.)
2. Using your display as a viewfinder, aim the camera lens at your subject, and press .
3. Press  or  to return to Camera mode, or press **OPTIONS** (right softkey) to explore other options, including sending the picture using Sprint Picture Mail.




> Record a Video

1. Highlight  and press  > **Photos** > **Camcorder** to activate the video camera.
2. Select **Video Mail** or **Long Video**.
3. Using the phone's display screen as a viewfinder, aim the lens at your subject, and press **RECORD** (left softkey), , or the Camera button to begin recording.
4. Press **DONE** (right softkey), , or the Camera button to stop recording.
5. Press **OPTIONS** (right softkey) to explore options, including sending the video using Sprint Picture Mail.

> Send a Text Message

1. Highlight  and press  > **Messages** > **Send Message** > **Text Message**.
2. Select a recipient from recent messages, or select **Go to Contacts** to select a recipient from your contacts, or press **NEW ADDR** (right softkey) to enter a phone number or email address by hand.
3. Enter a wireless phone number or email address. If prompted, press **CONTINUE** (left softkey).
4. Use your keypad to enter a message or select **OPTIONS** (right softkey) to choose from preset messages or emoticons.
5. Press **SEND** (left softkey).

> Send a Picture or Video










1. Press  > **Messages** > **Send Message** > **Picture Mail**.
2. Select **Go to Contacts** or **NEW ADDR** to enter the recipients, and press .
3. Use the navigation key to select from **In Phone**, **Memory Card**, **Online Albums**, **Take New Picture**, **Take New Video**, or **Text Only**.
4. Highlight the picture or video you wish to send and press .
5. Follow the onscreen prompts. You can select a subject, and add a text or audio message if you wish.
6. Press **SEND** (left softkey).

Manage Your Account

> Online: www.sprint.com

- make a payment, see your bills, enroll in online billing
- check minute usage and account balance
- see or modify the details of your Sprint service plan
- get detailed instructions and download content

> From Your Sprint Phone

- press  *SPRT  4 GHI  to check minute usage and account balance
- press  *SPRT  3 DEF  to make a payment
- press  *SPRT  2 ABC  to access a summary of your Sprint service plan or get answers to other questions

> From Any Other Phone

- Sprint Customer Service: Dial 1-800-Sprint1 (1-800-777-4681)
- Business Customer Service: Dial 1-800-927-2199

Helpful Sprint Information

> Total Equipment Protection

The protection you need so you can be worry free

Should anything happen to your phone, you'll have a worry-free way to ensure that you get connected again soon.

• Coverage includes:

Loss, Theft, Routine maintenance, Physical or liquid damage, Mechanical or electrical problems, Failure from normal wear and tear

• For more information:

See the Total Equipment Protection brochure available at any participating retail location or go to www.sprint.com/tep for more details. To enroll within 30 days of activation call 1-800-584-3666.

Total Equipment Protection is a service provided by Asurion Protection Services, LLC, Continental Casualty Company's (a CNA company) licensed agent for the customers of Sprint.

> Sprint 411

Dial 411 for nationwide listings, movie show times, restaurant reservations, driving directions and more. Spanish-speaking operators are available. See www.sprint.com for pricing and more details.

> For Your Phone

This *Get Started Guide* to get you up and running.

Features Guide – Get the most from the services and features available on your new Sprint phone.

User Guide – View the comprehensive *User Guide* to the LG LX370.

Web – Go to sprint.com/support to download the latest version of the *User Guide*, and to access troubleshooting and other resources.

> For Your Sprint Experience

sprint.com/begin – Visit sprint.com/begin to discover all you can do with your phone and Sprint service. Explore all your options, find ways to personalize your experience, even vote for your favorite features. It's a whole new beginning.

> For the Environment

Recycle your old phone safely and conveniently using the addressed recycling envelope packaged with your new phone. Visit sprint.com/recycle for more details.



Recicla tu teléfono viejo segura y convenientemente usando el sobre prediseñado incluido en la caja con tu nuevo teléfono. Visita sprint.com/recycle para más detalles.

> Para el medio ambiente

Recicla tu teléfono viejo segura y convenientemente usando el sobre prediseñado incluido en la caja con tu nuevo teléfono. Visita sprint.com/recycle para más detalles.

> Para tu experiencia Sprint

Descubre todo lo que puedes hacer con tu teléfono y el servicio Sprint. Explora todas tus opciones, encuentra las maneras de personalizar tu experiencia e incluso vota por tus funciones favoritas. Es todo un nuevo comienzo.

> Para tu teléfono

Esta *Guía de Inicio* para dejarte completamente listo. Obtén el máximo de los servicios y las funciones disponibles en tu nuevo teléfono Sprint. **Guía del Usuario:** Consulta la *Guía del Usuario* global del LG LX370. **Internet:** Visita sprint.com/support para descargar la versión más reciente de la *Guía del Usuario* y acceder a ayuda técnica y otros recursos.